

Order Installation document



بيبان
BEBAN



How to install my Villa Garage Door






بيبان
BEBAN









Beban Villa Door Installation Manual






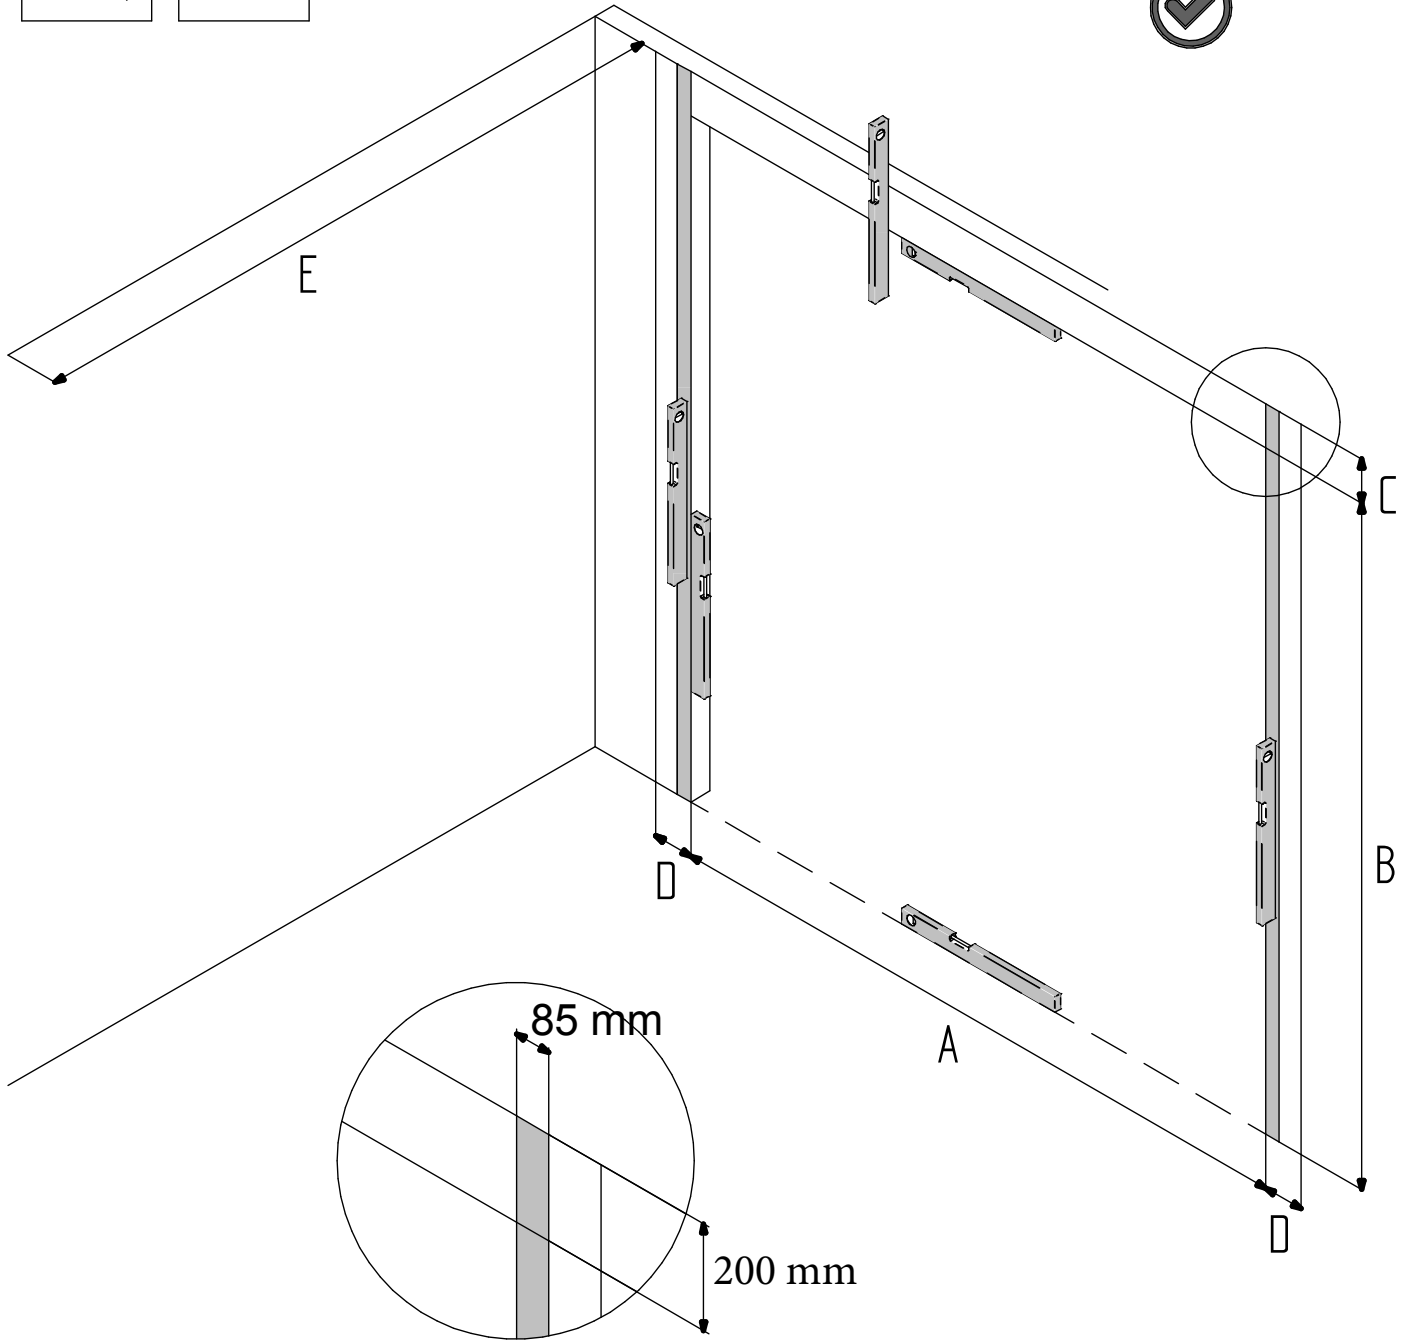
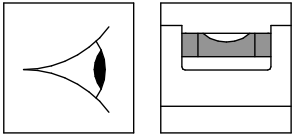







A	B	C	D	E
DLW	DLH	FHR	FSR	FMD
Day Light Width	Day Light Height	Free Head Room	Free Side Room	Free Mounting Depth

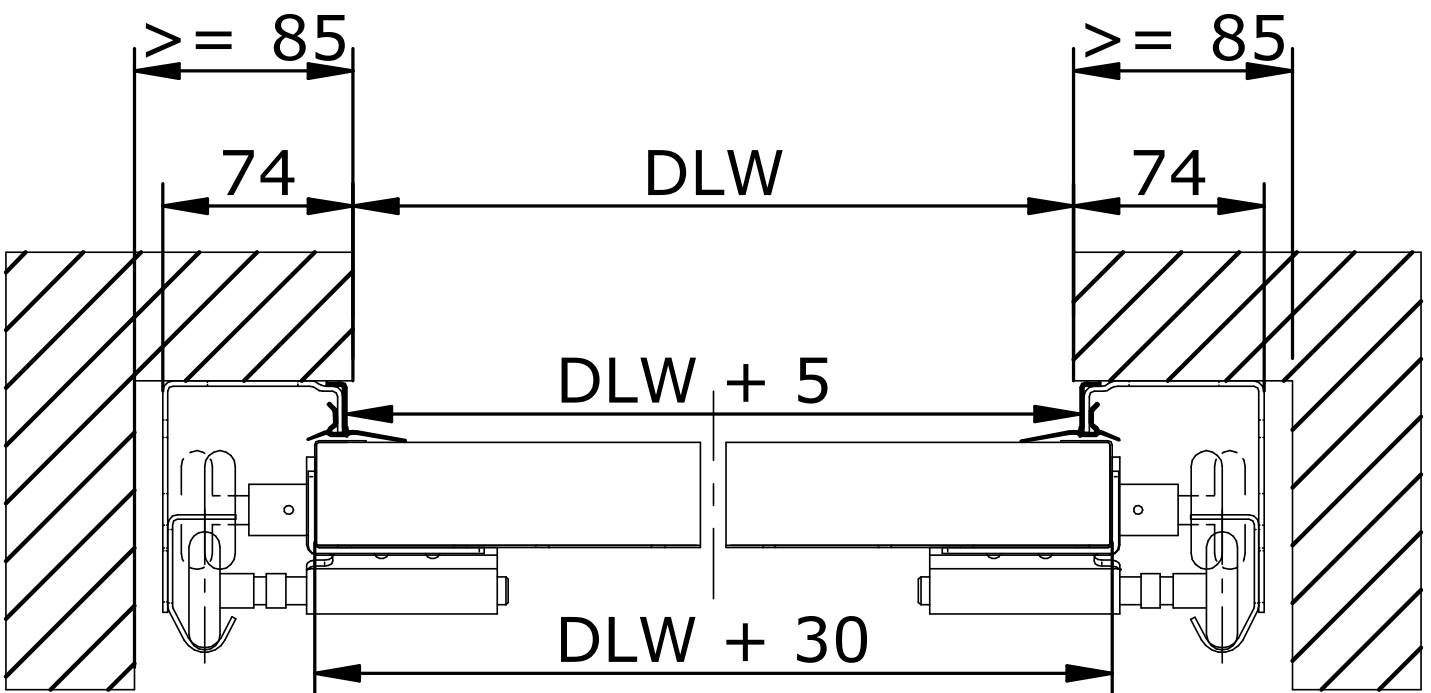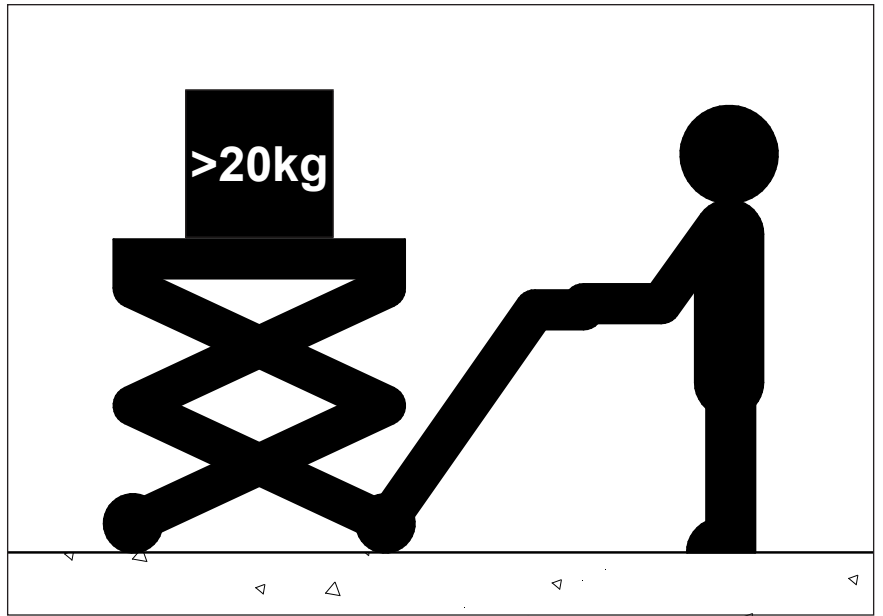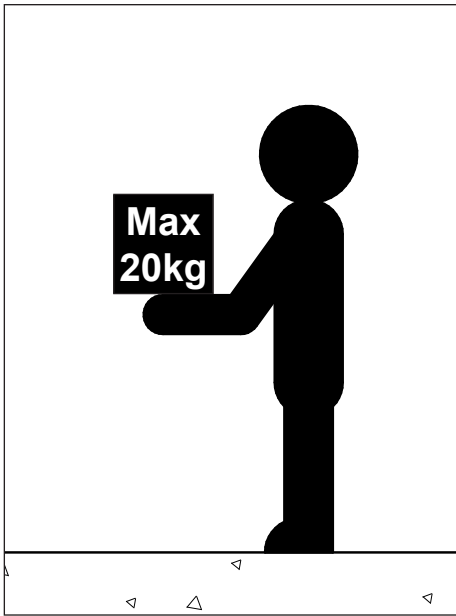


G200

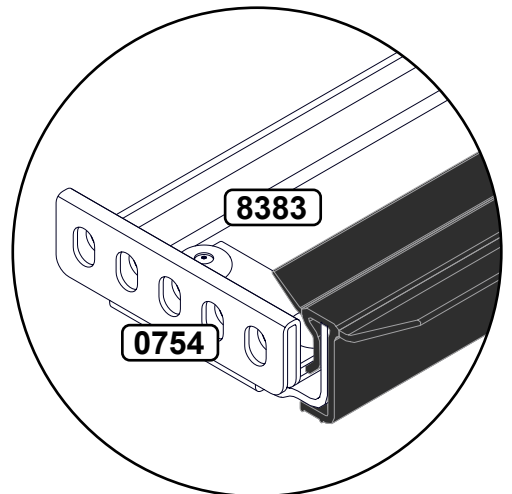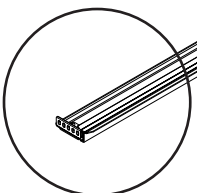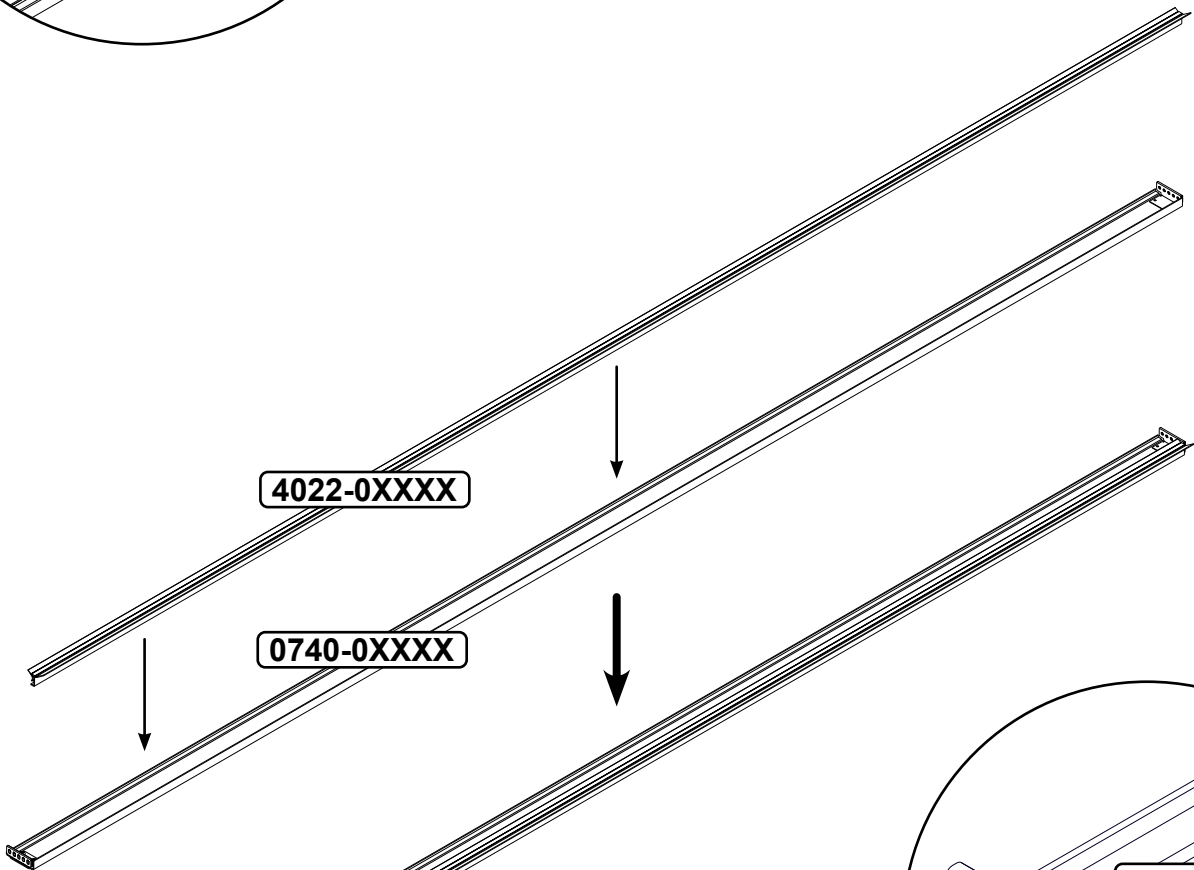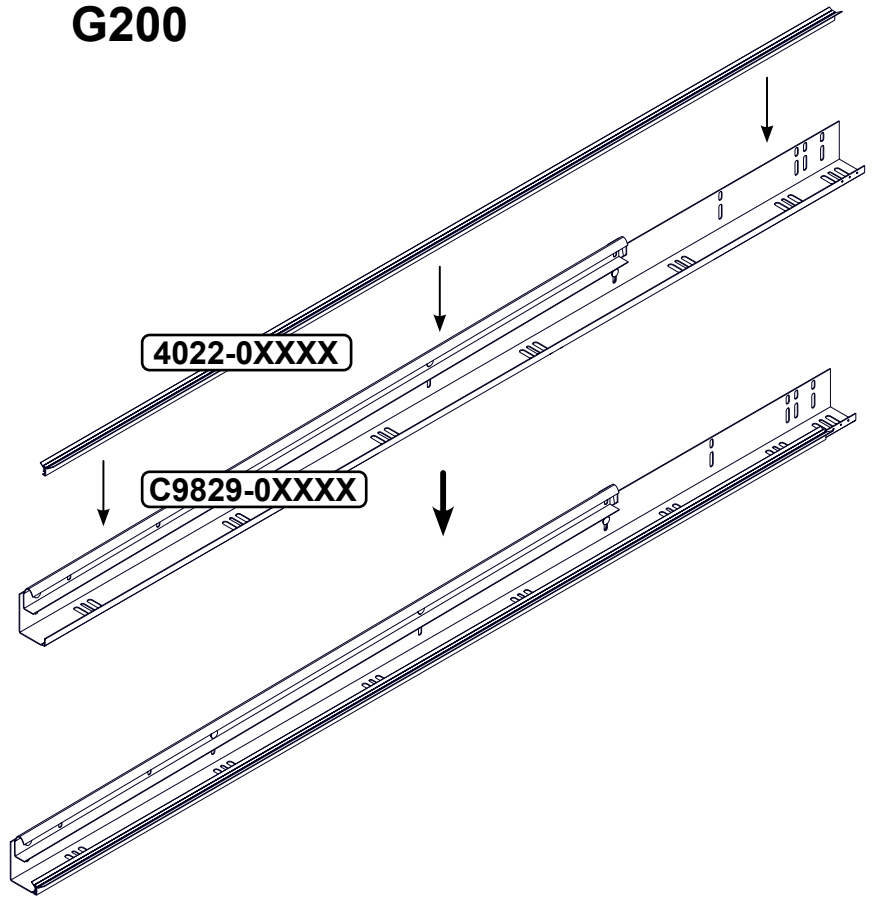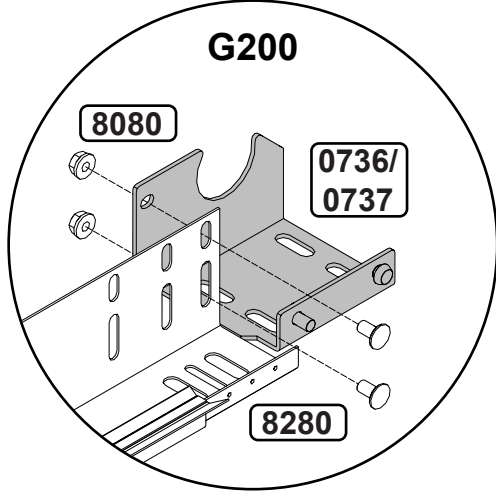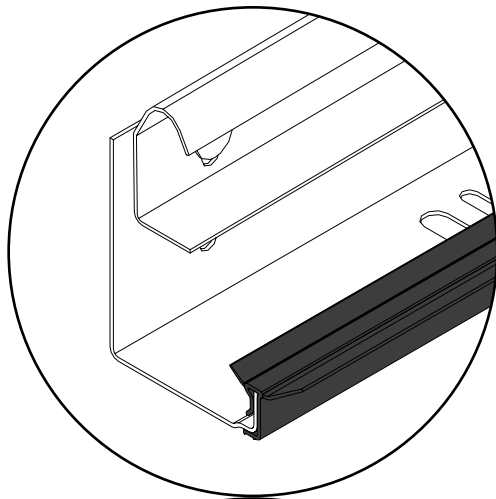

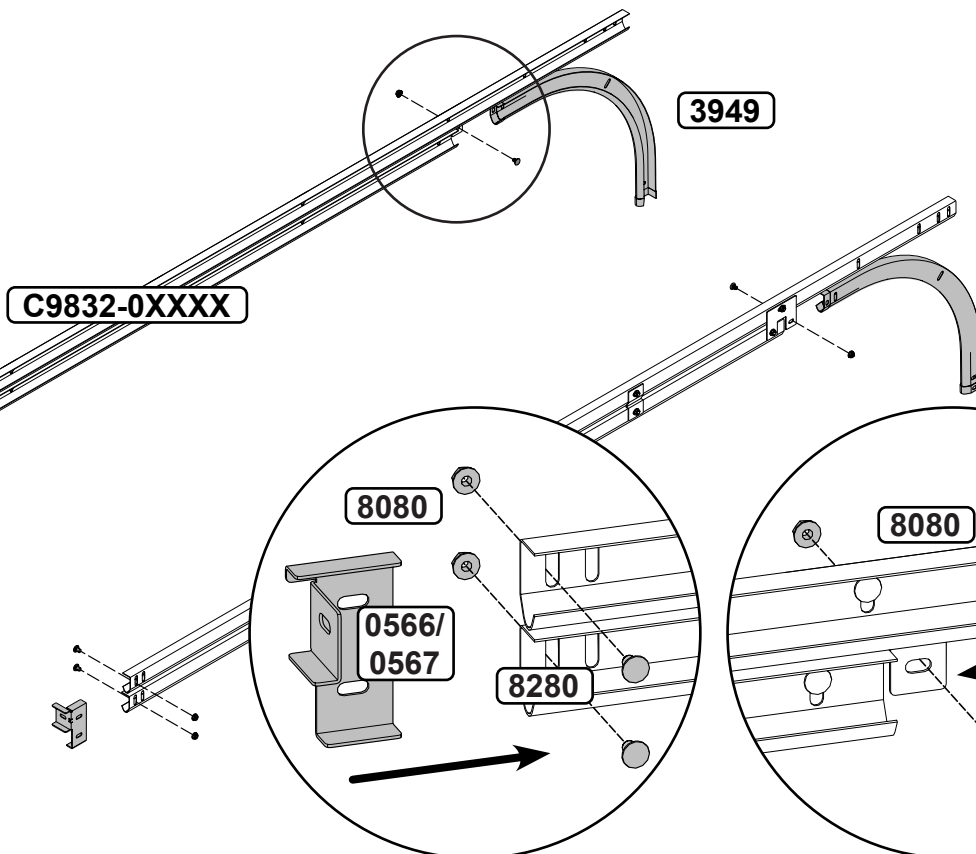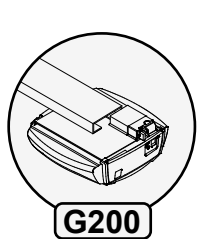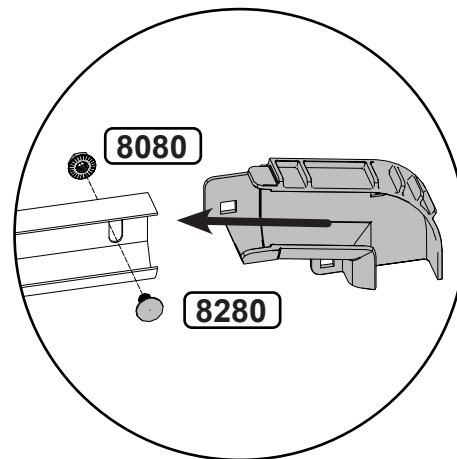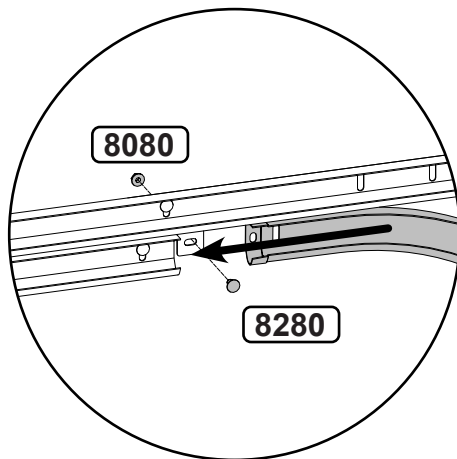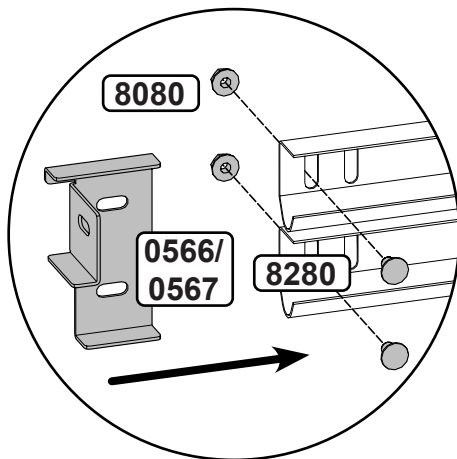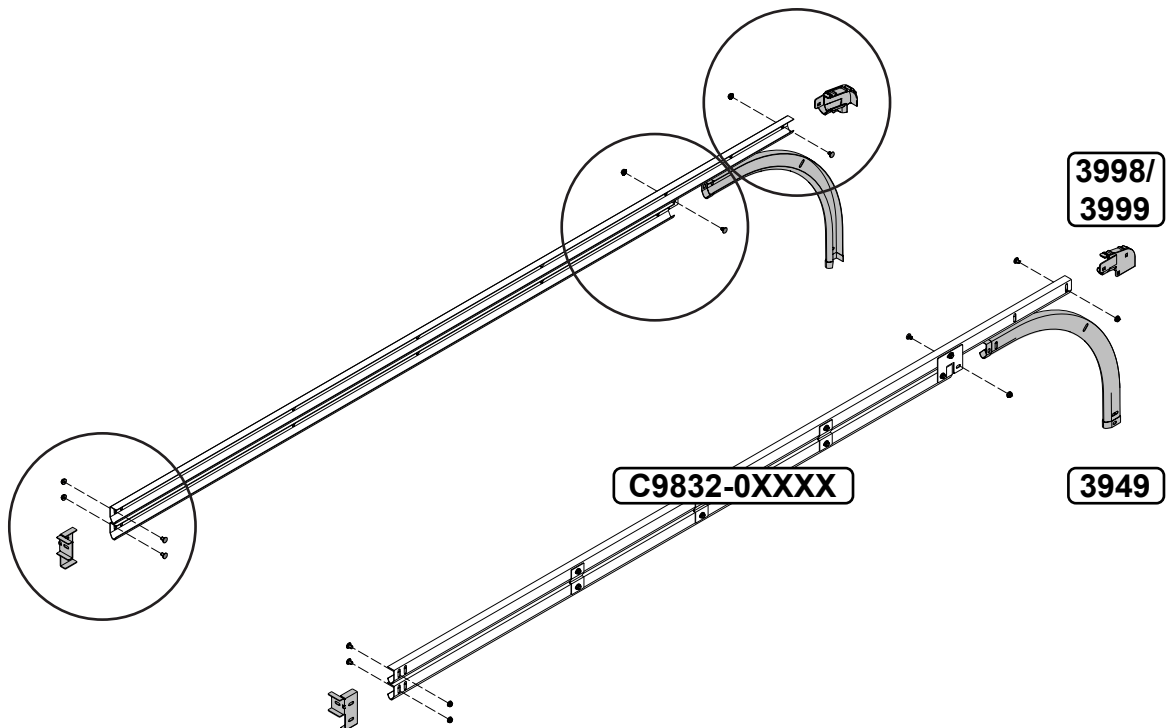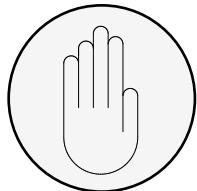

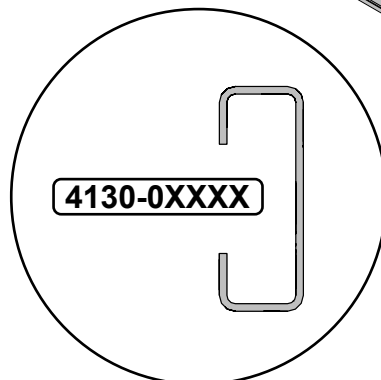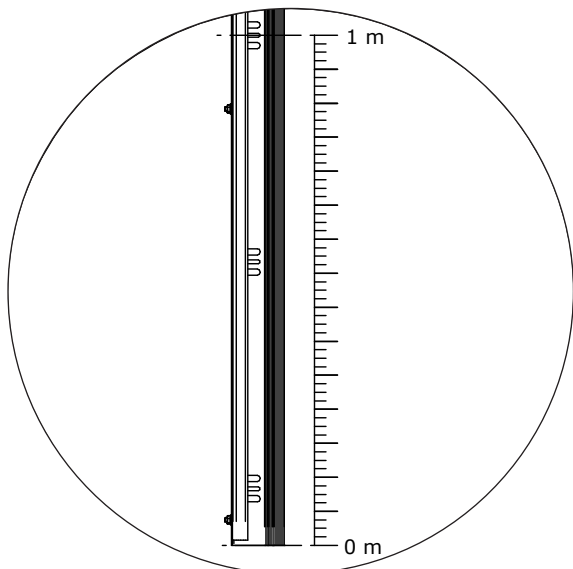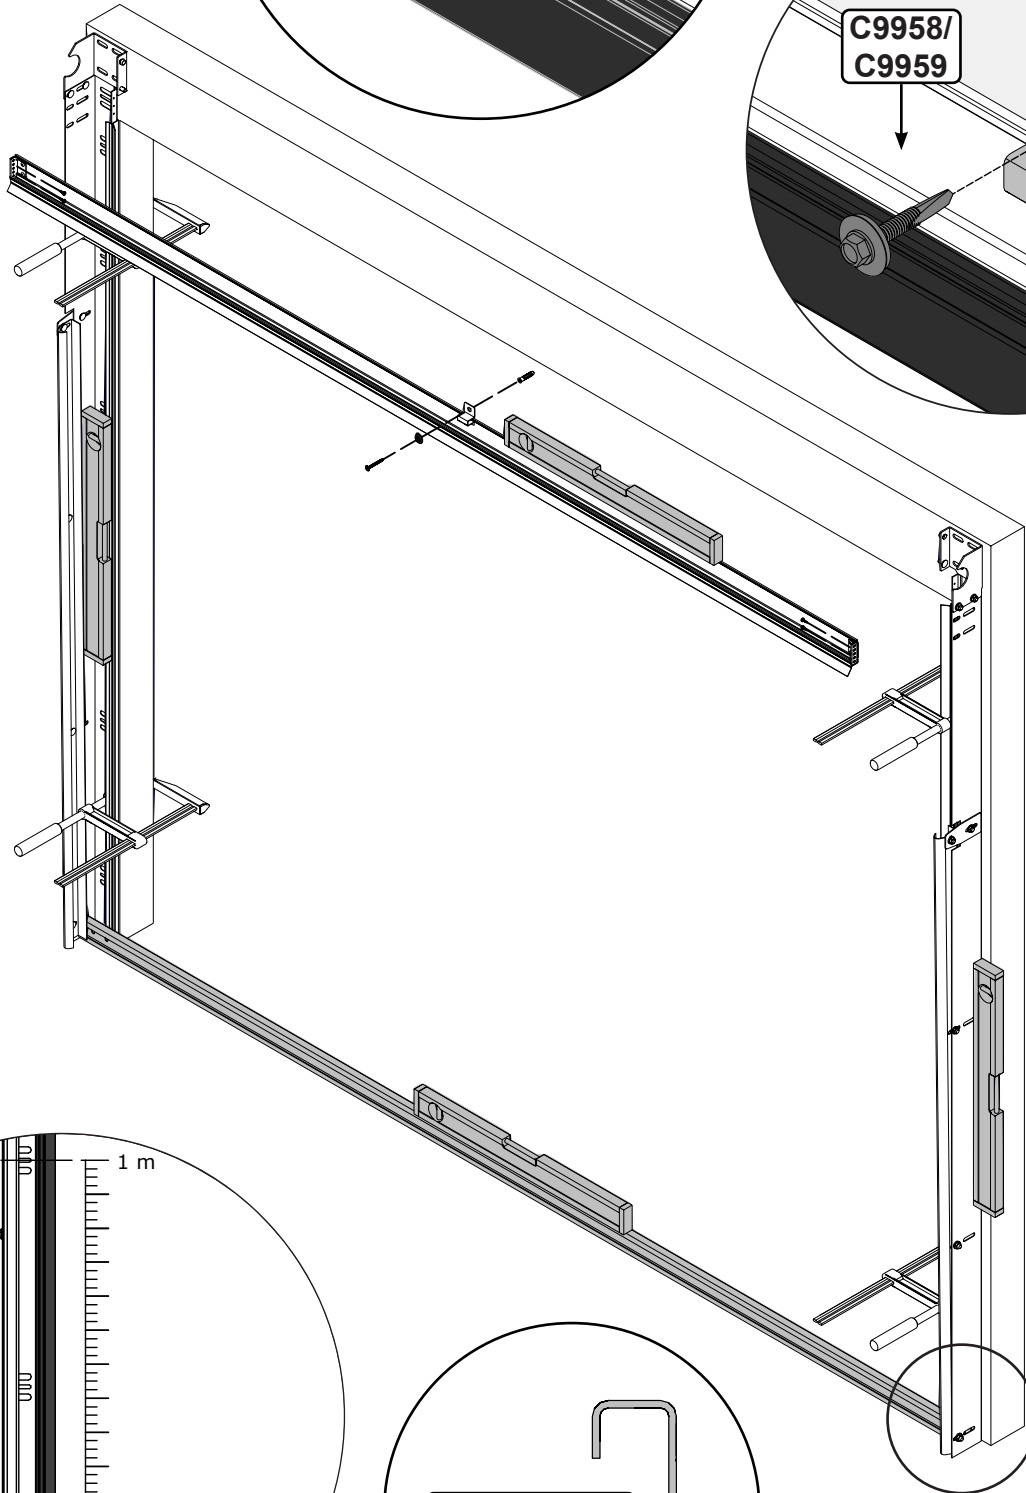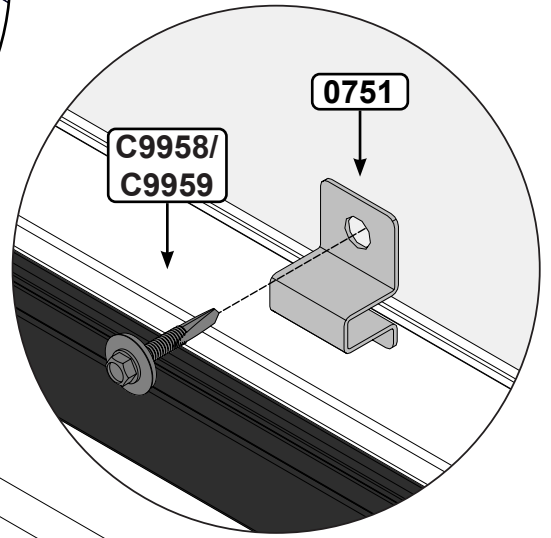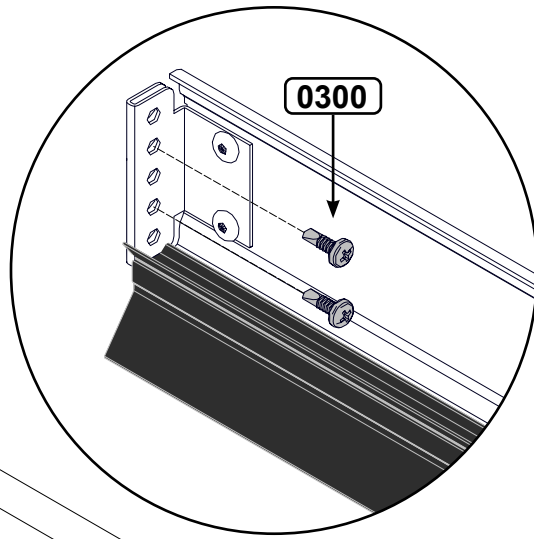


Ø6













C9958


Ø8







C9959

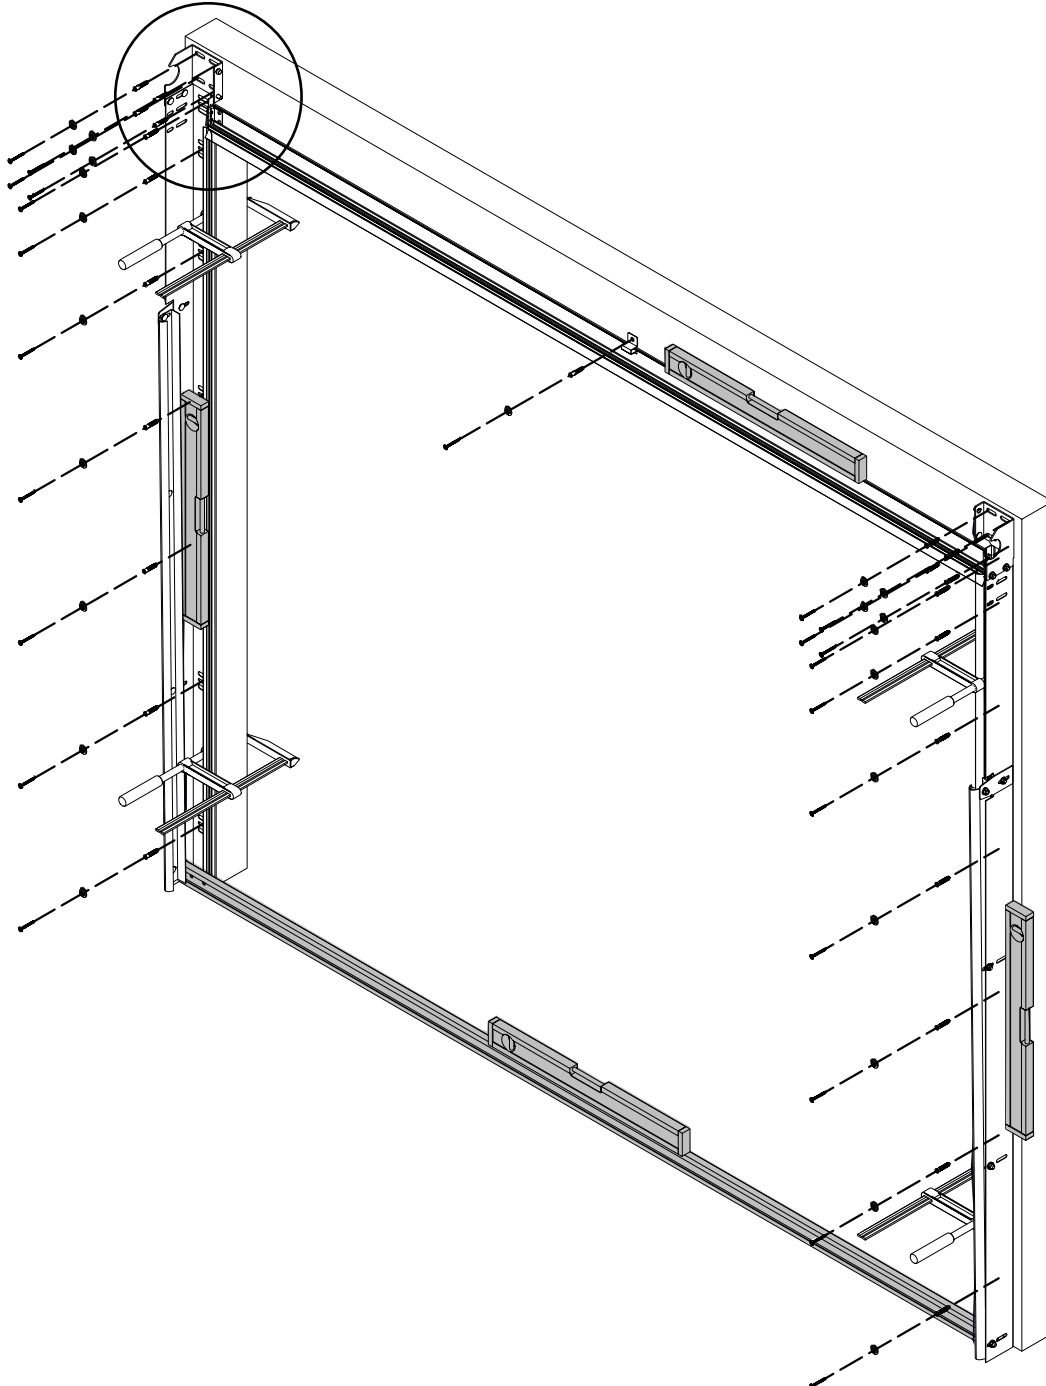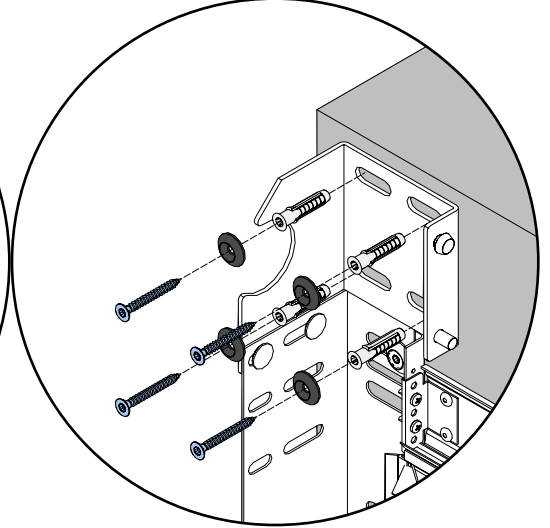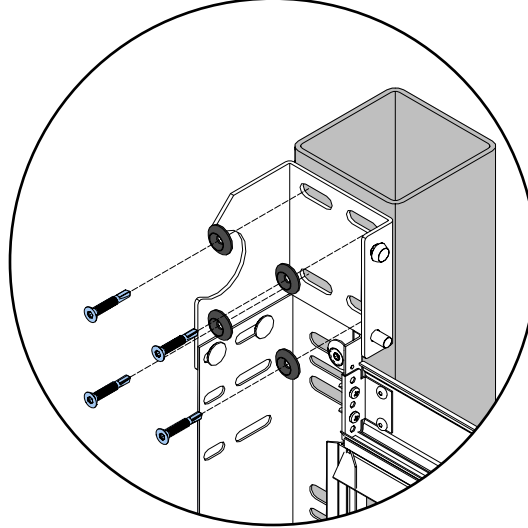


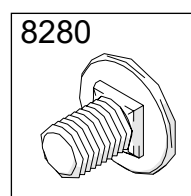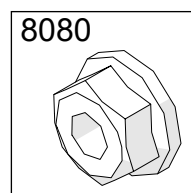
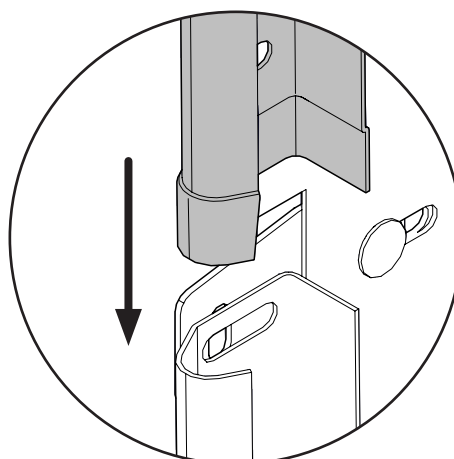
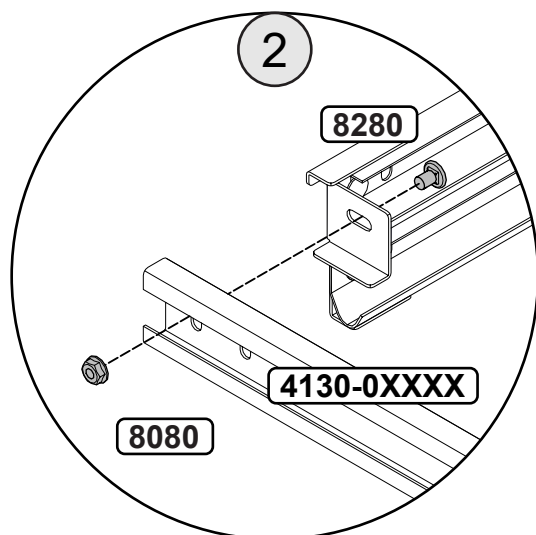
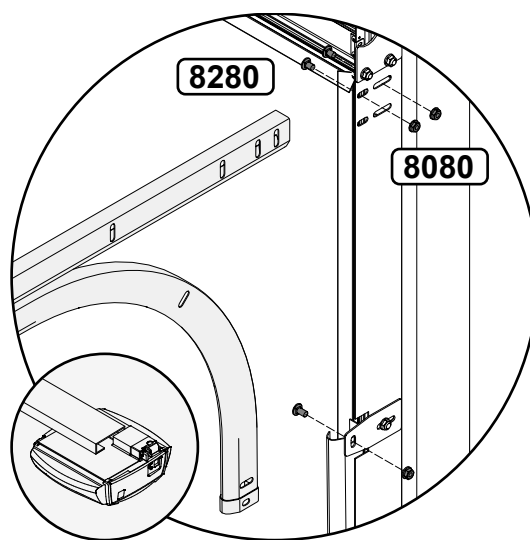
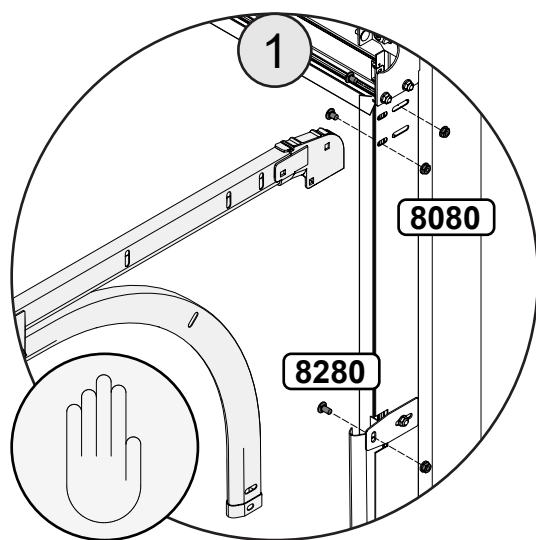
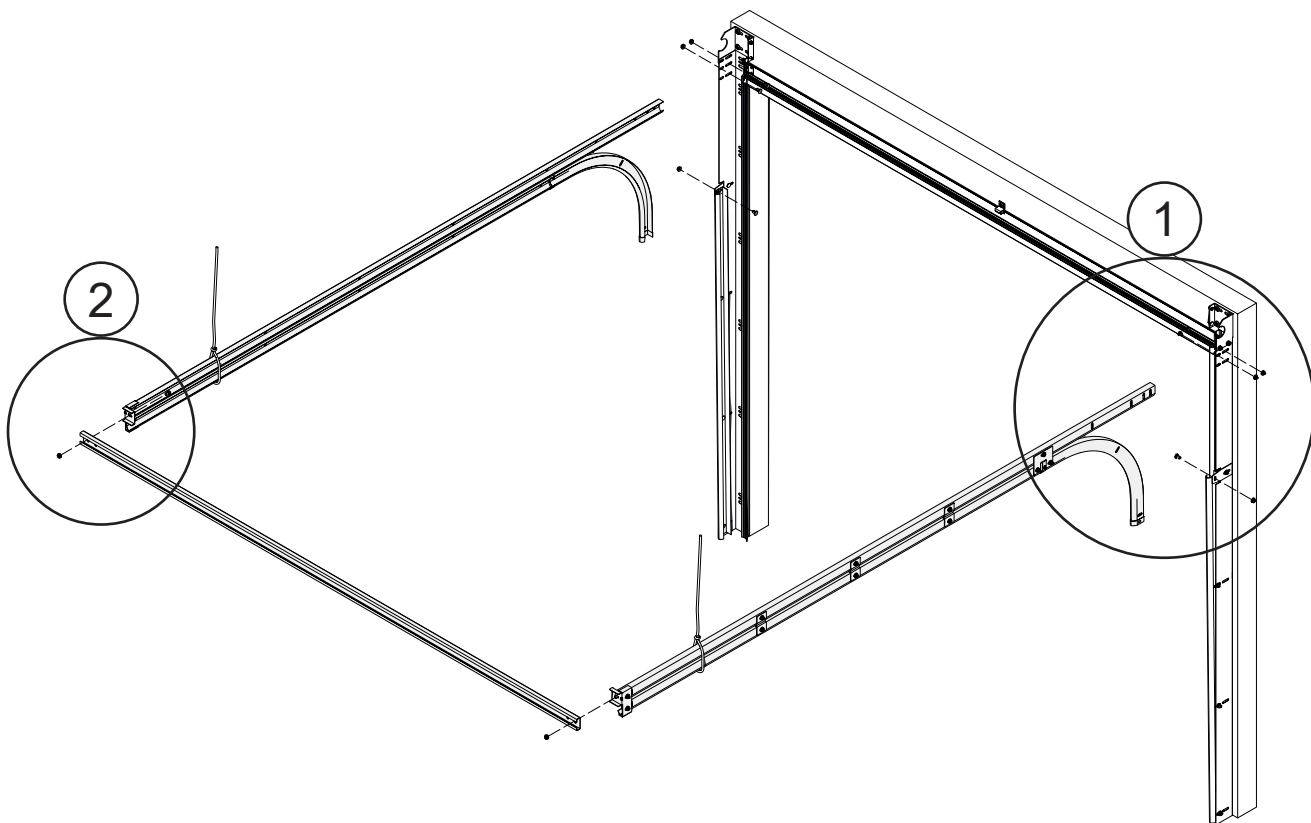


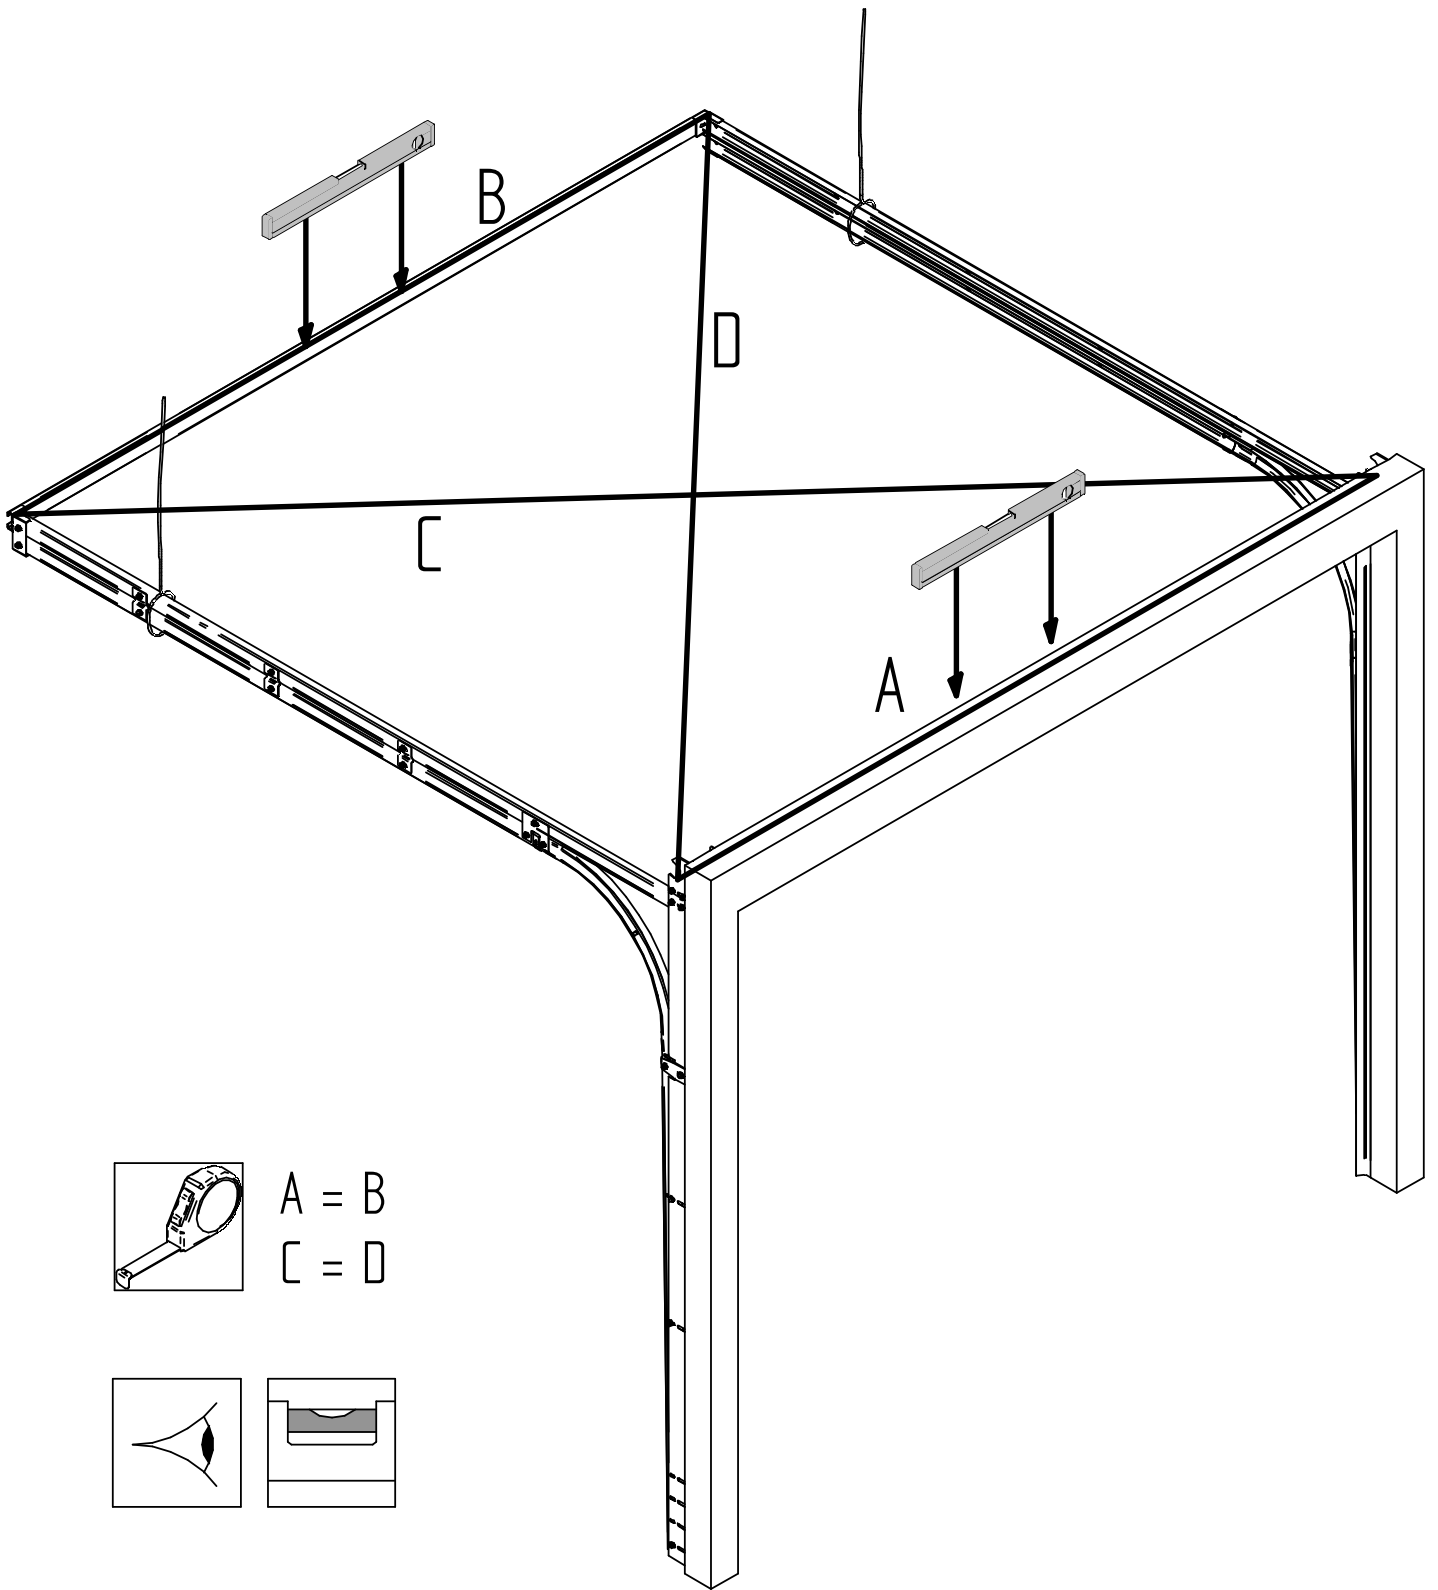


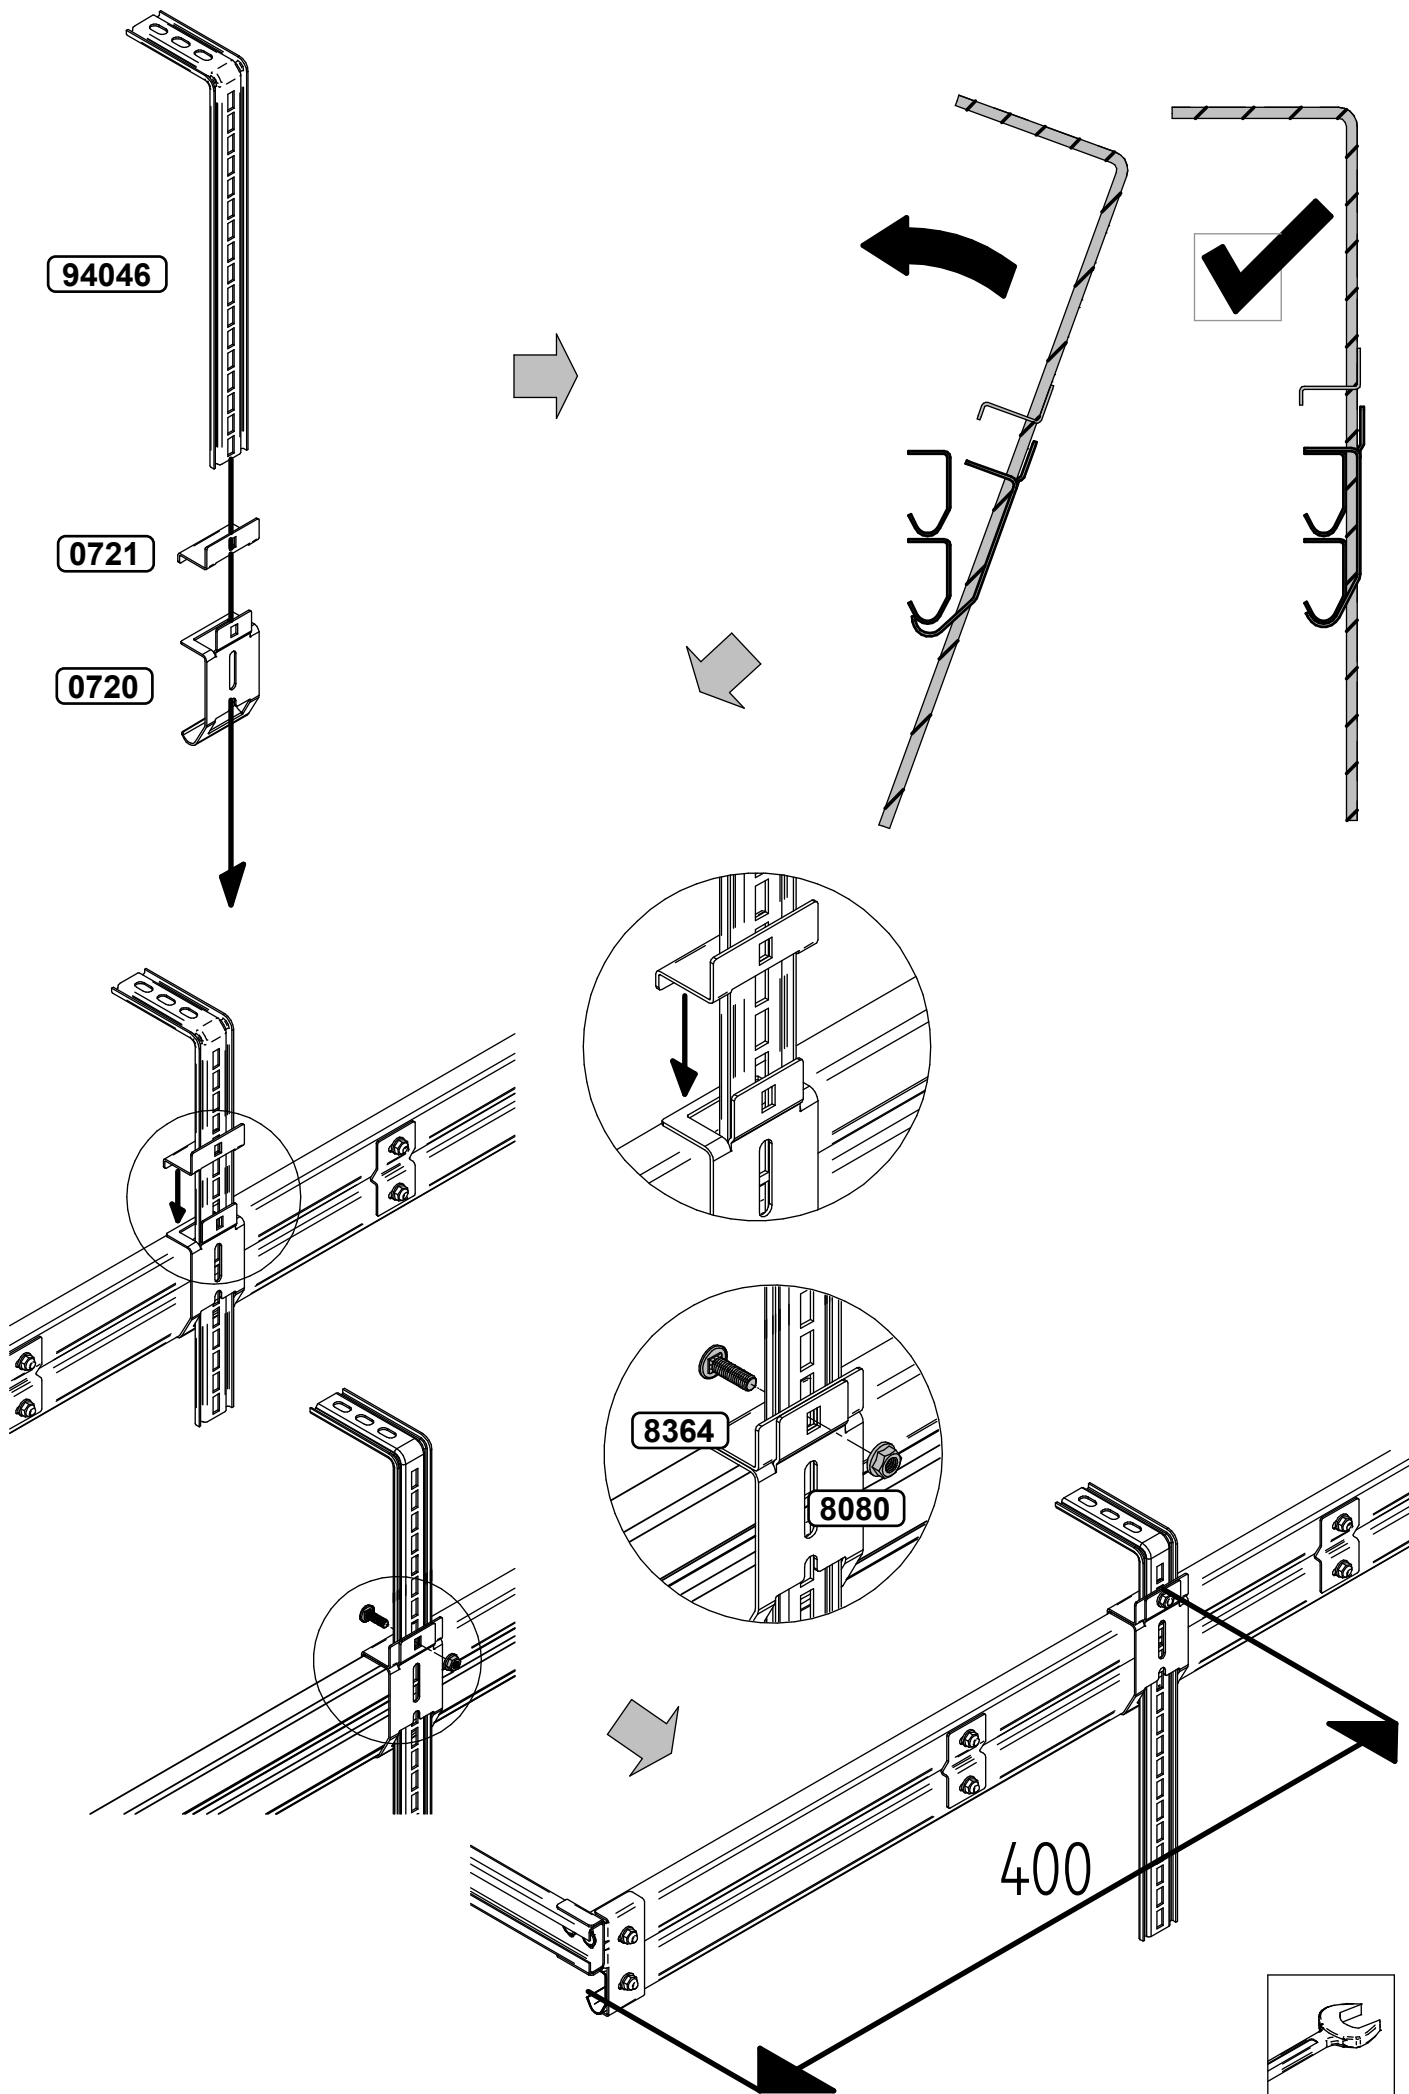


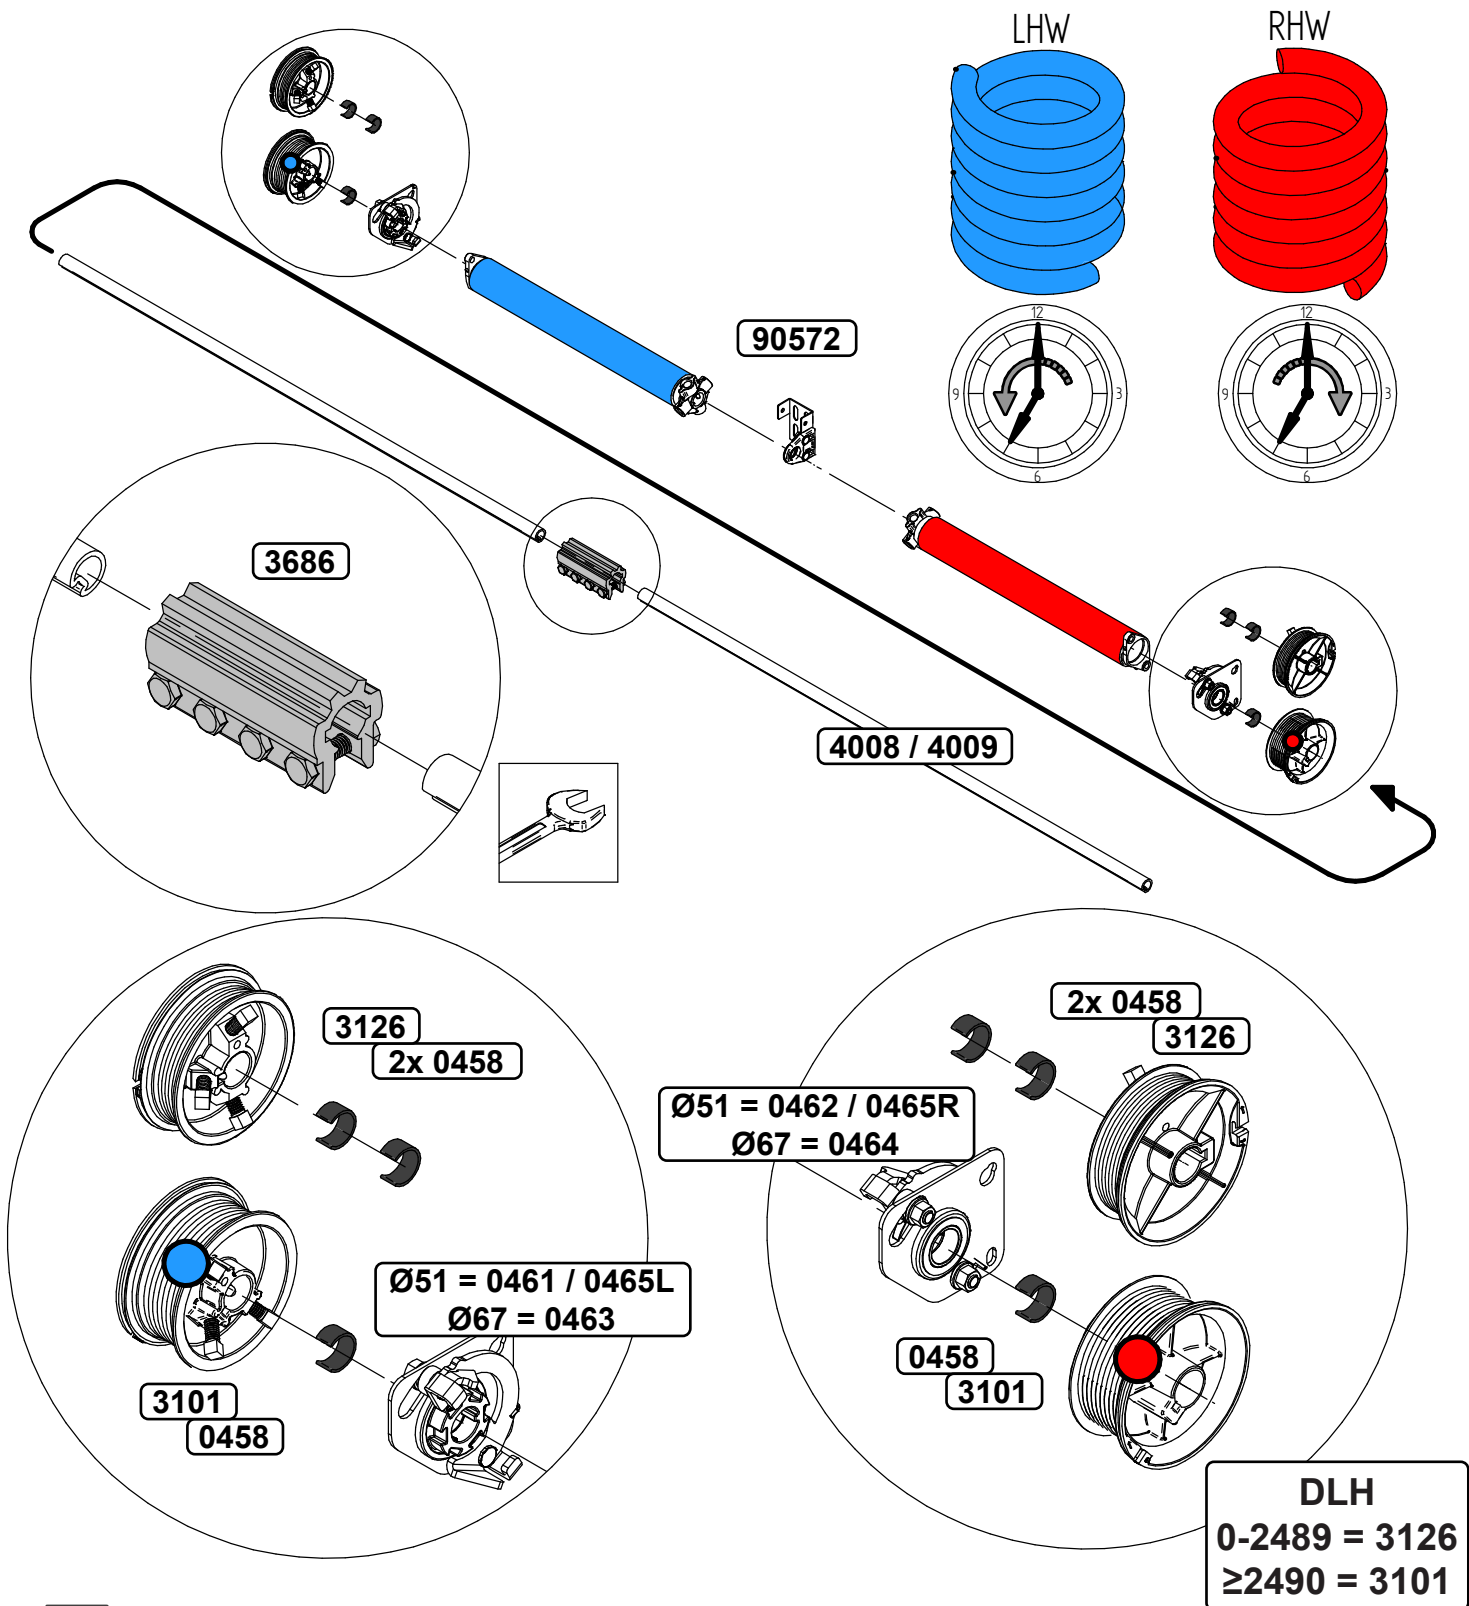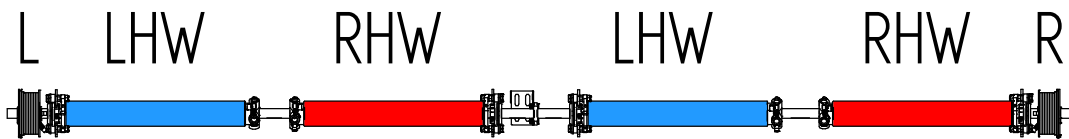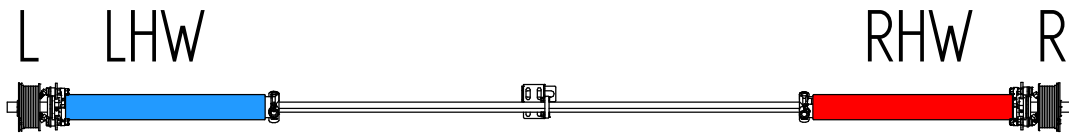

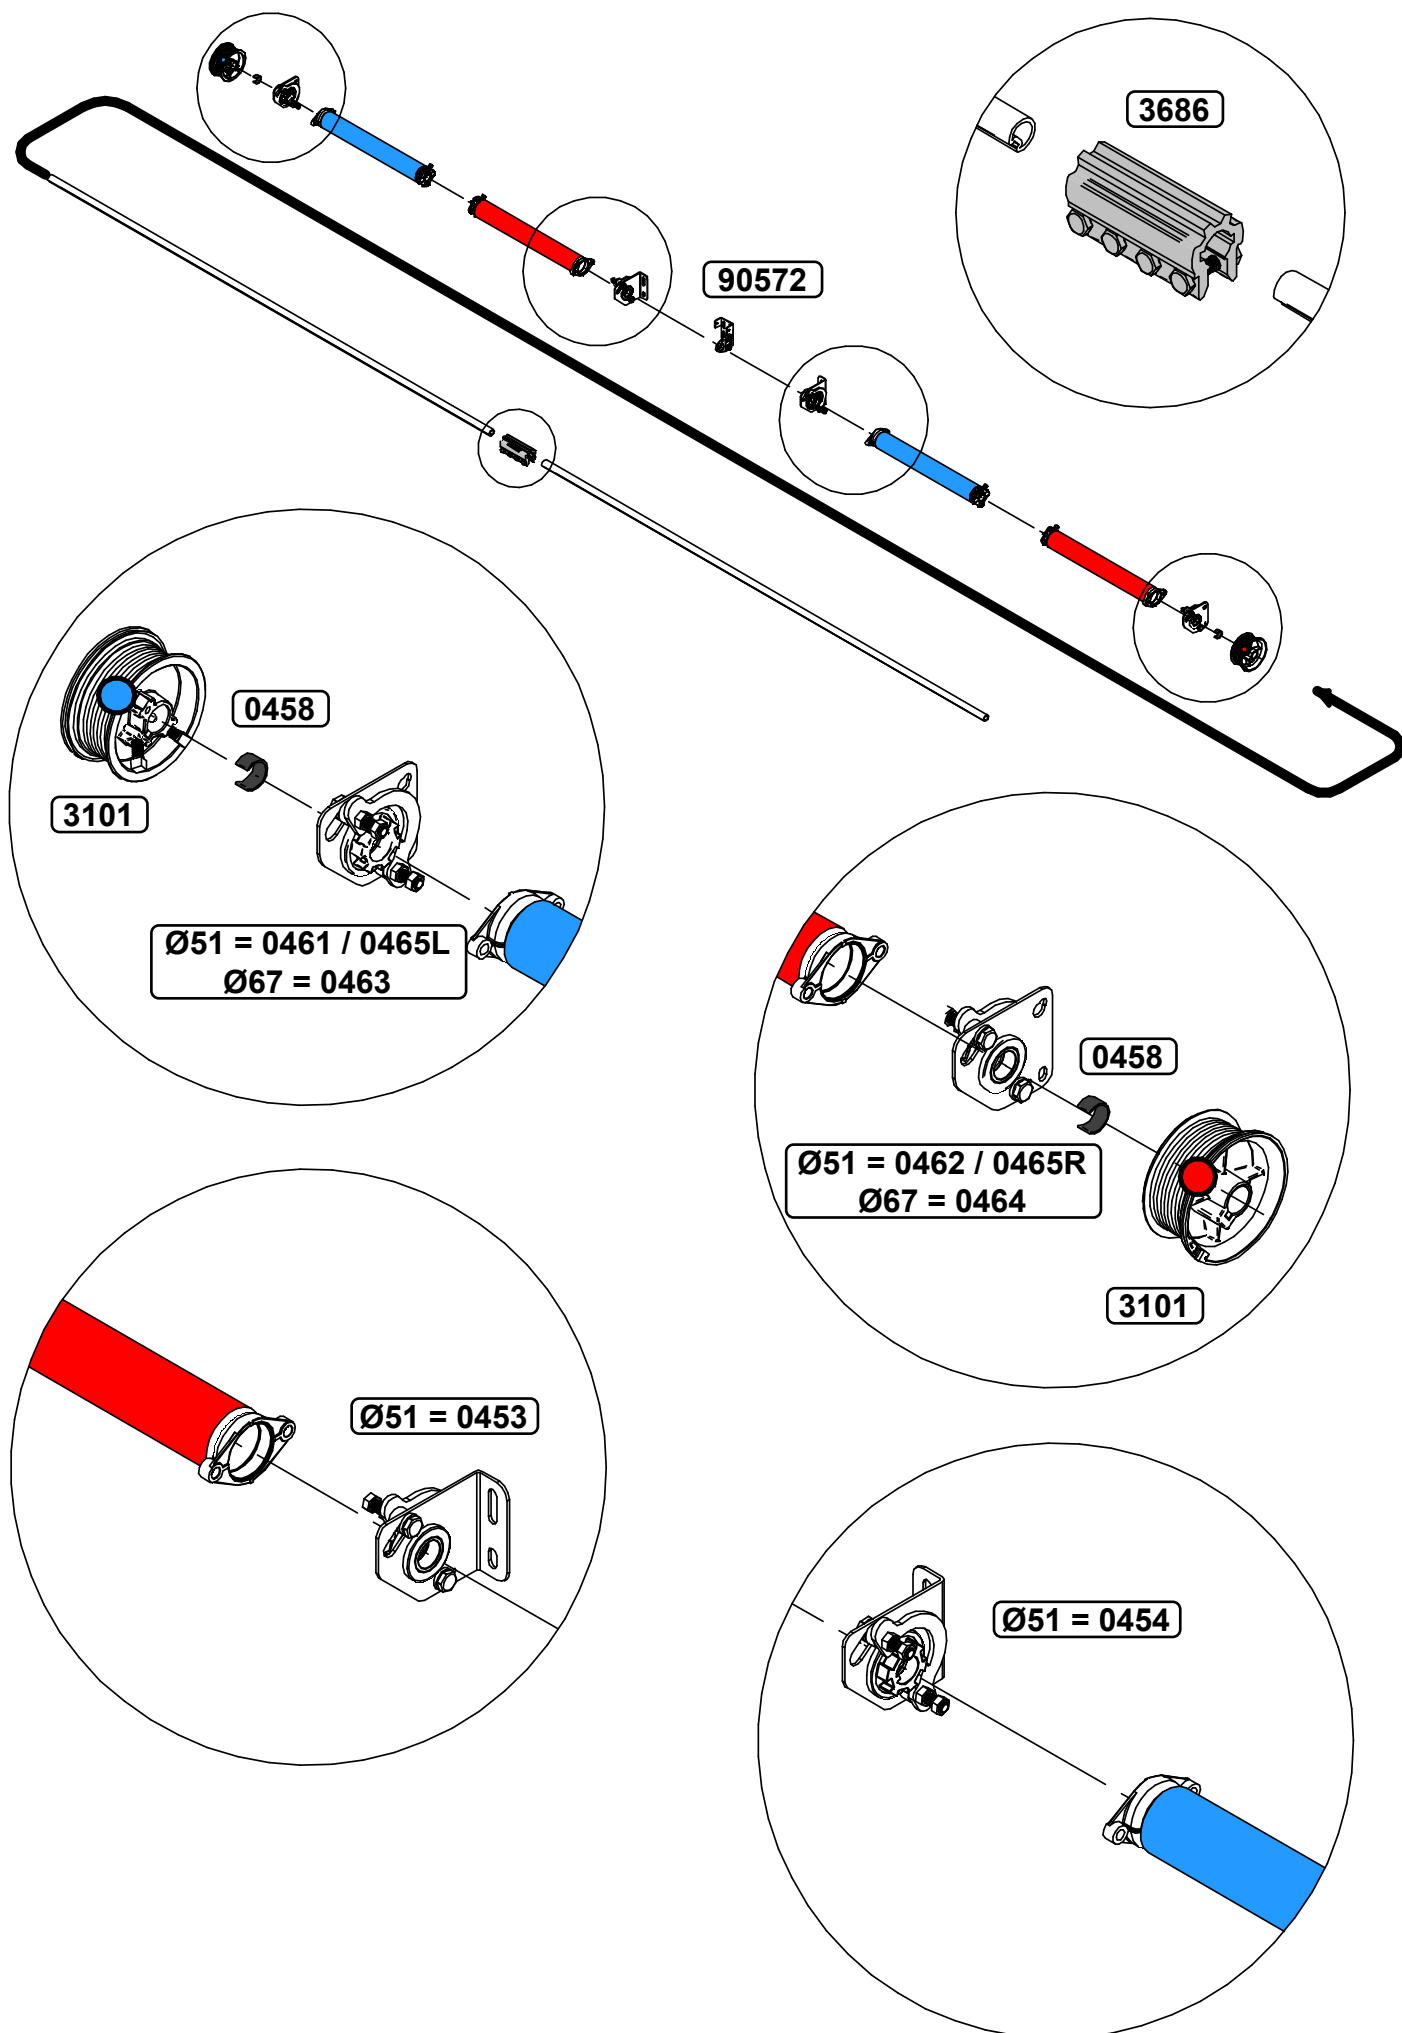



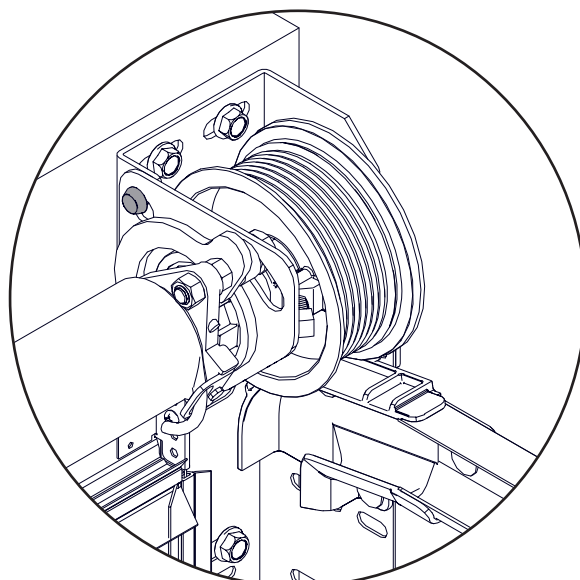
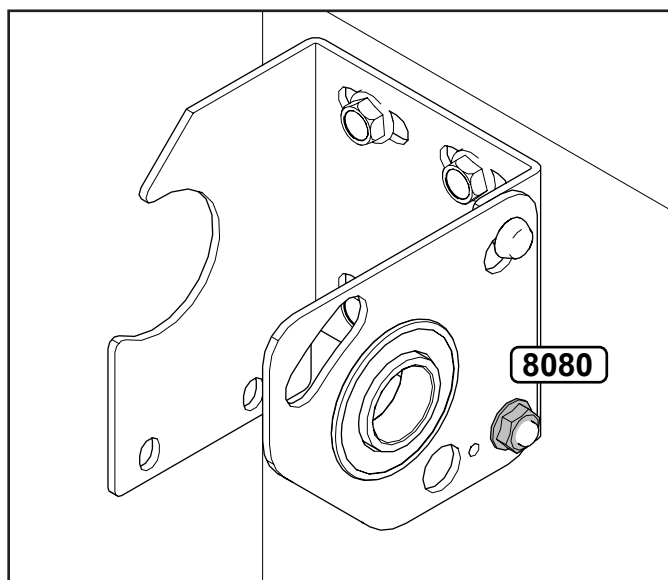
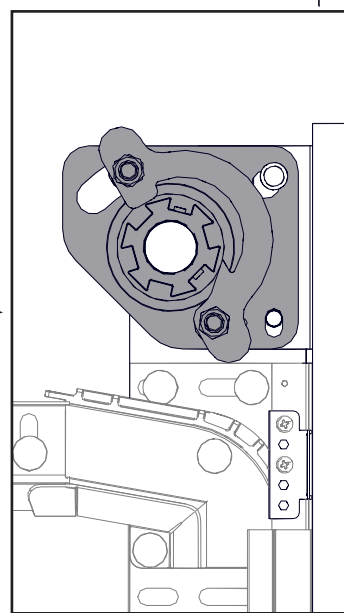
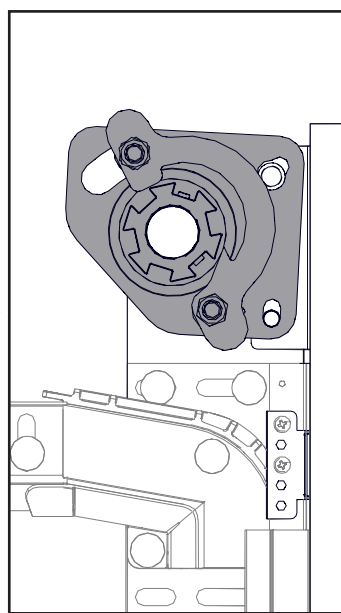
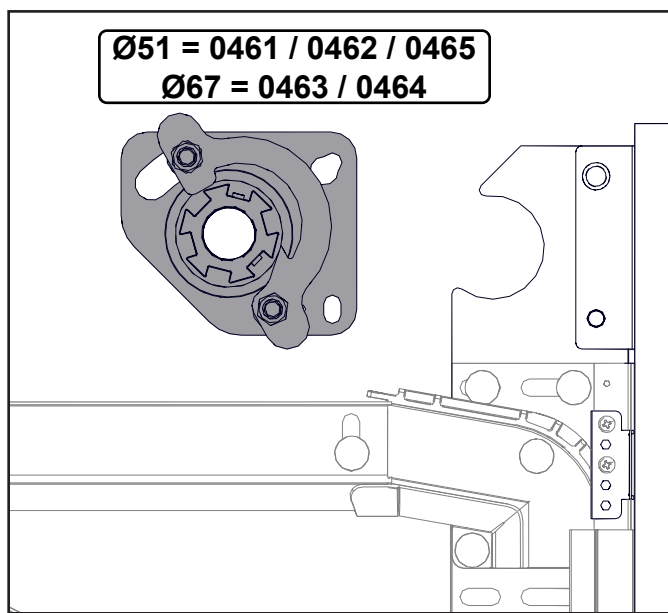
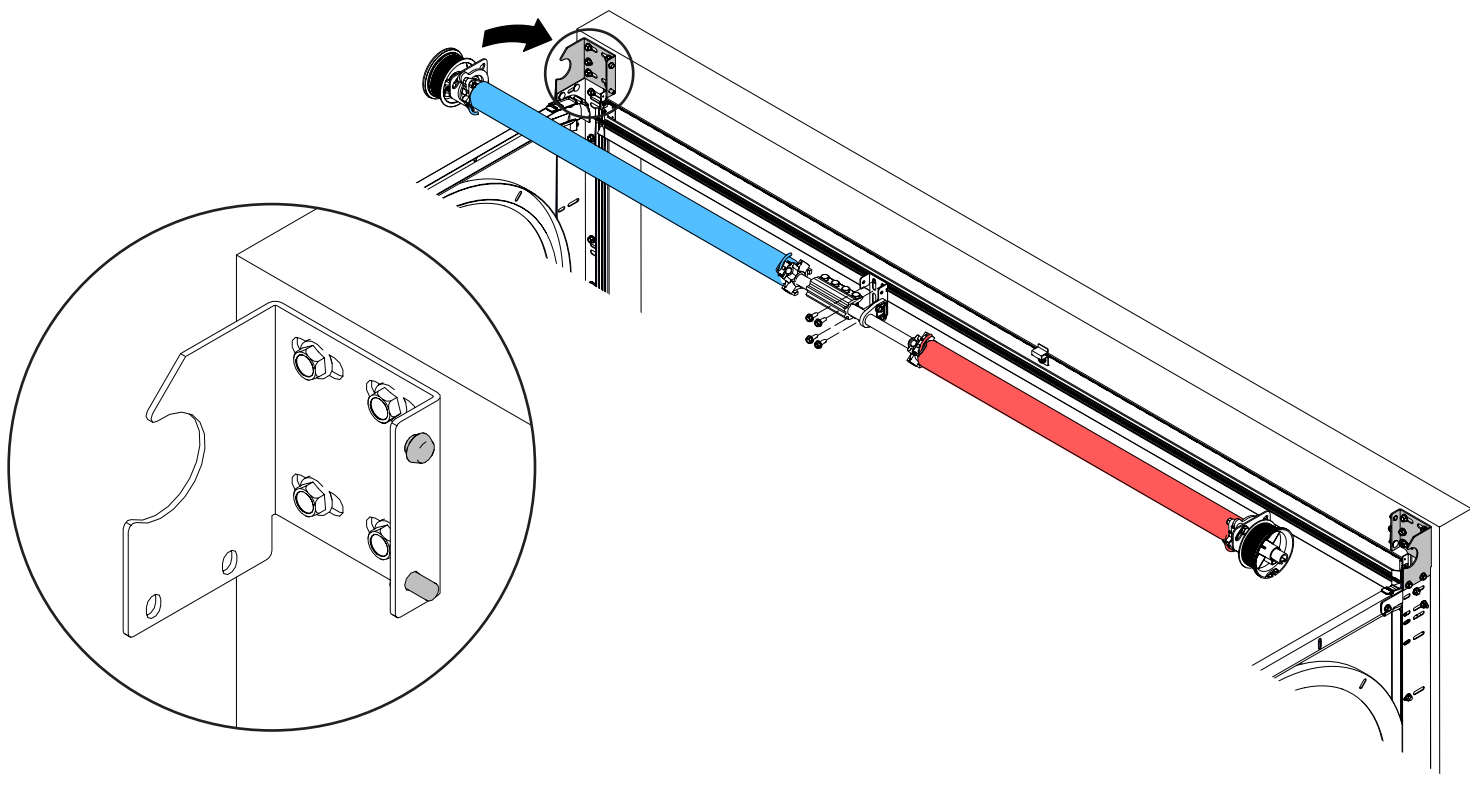




1

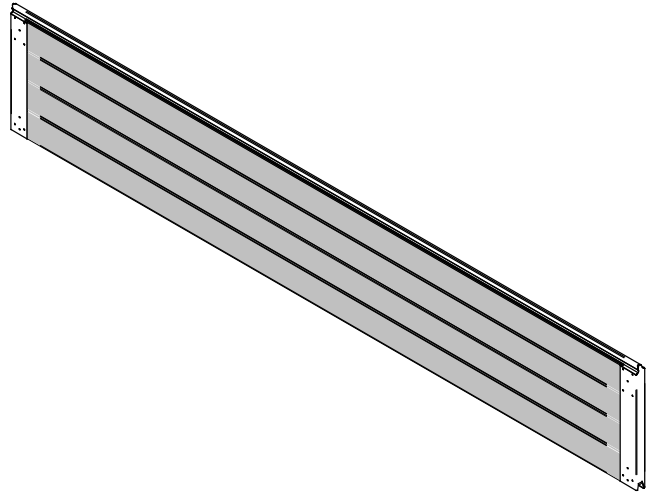


1

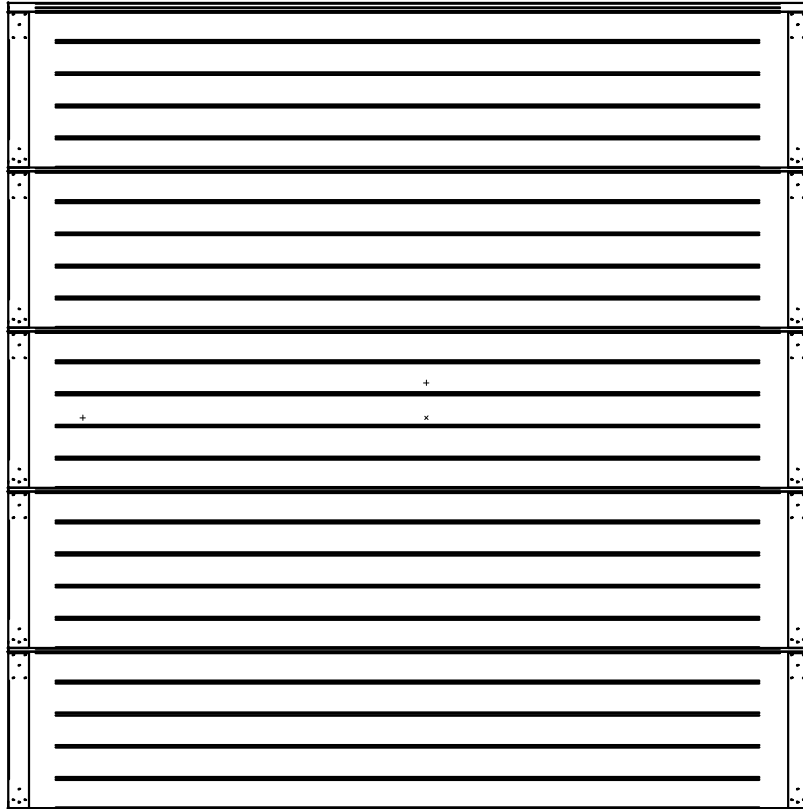

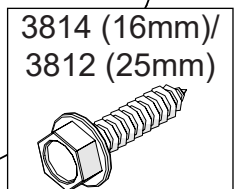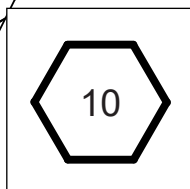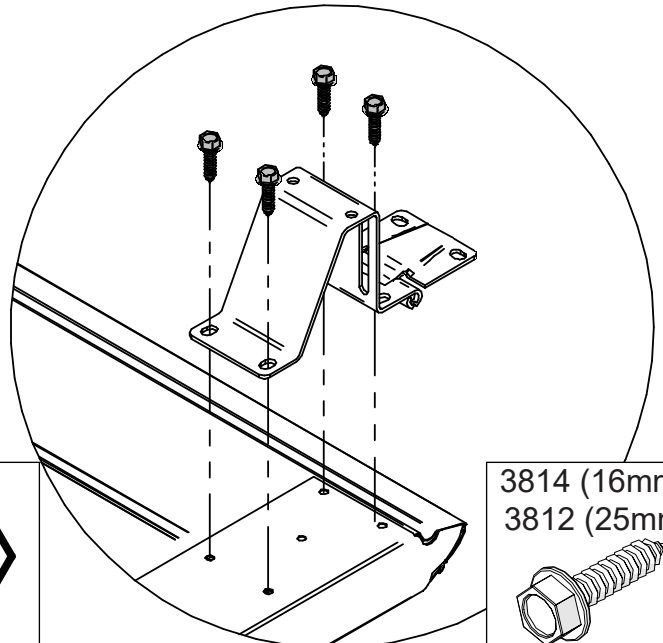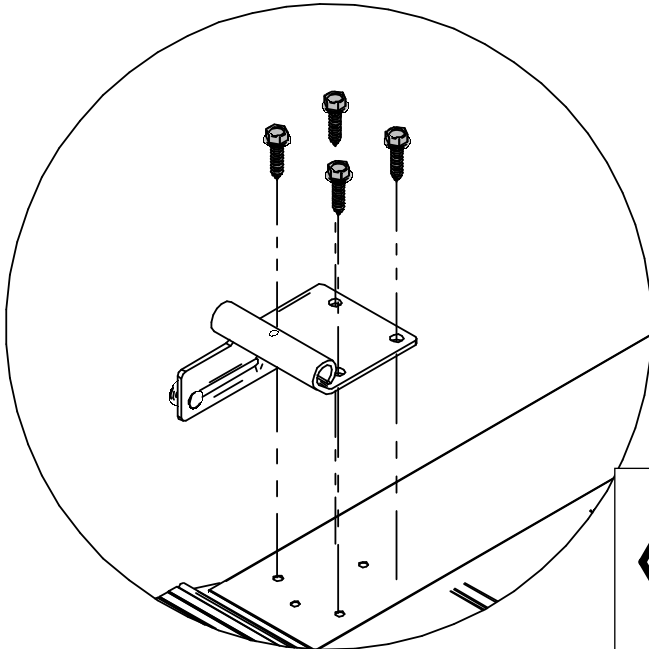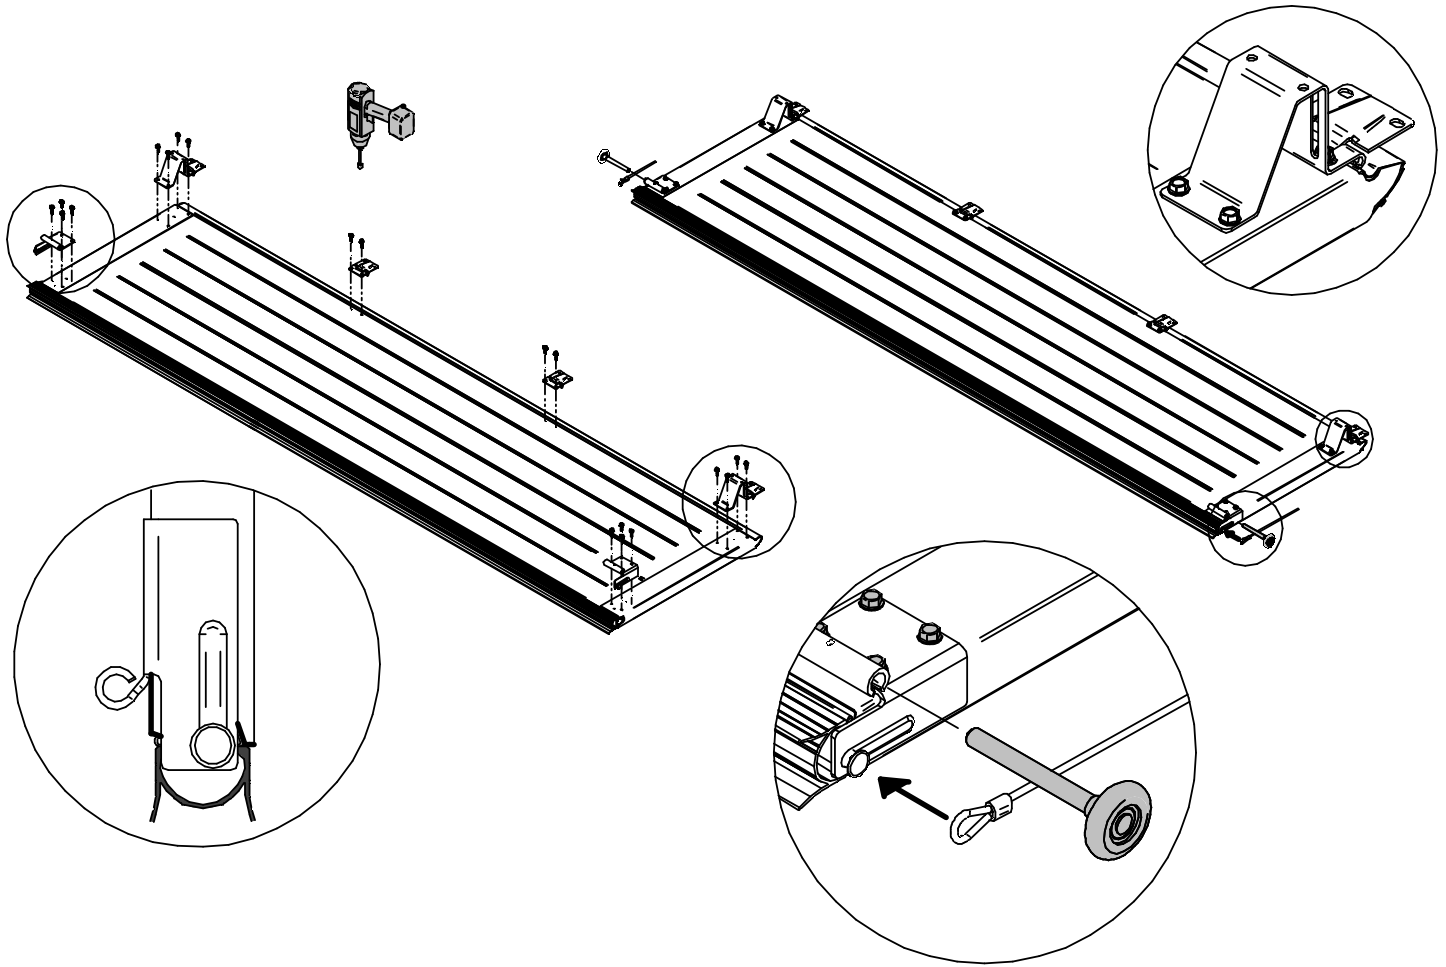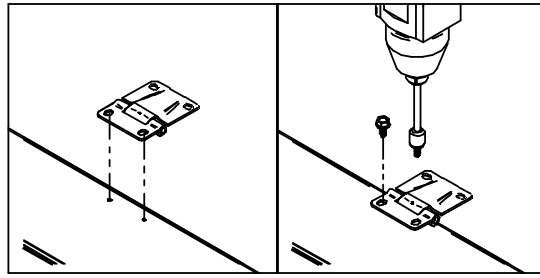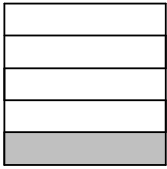


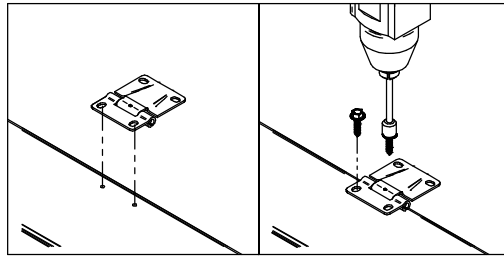
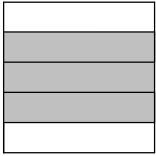


ST

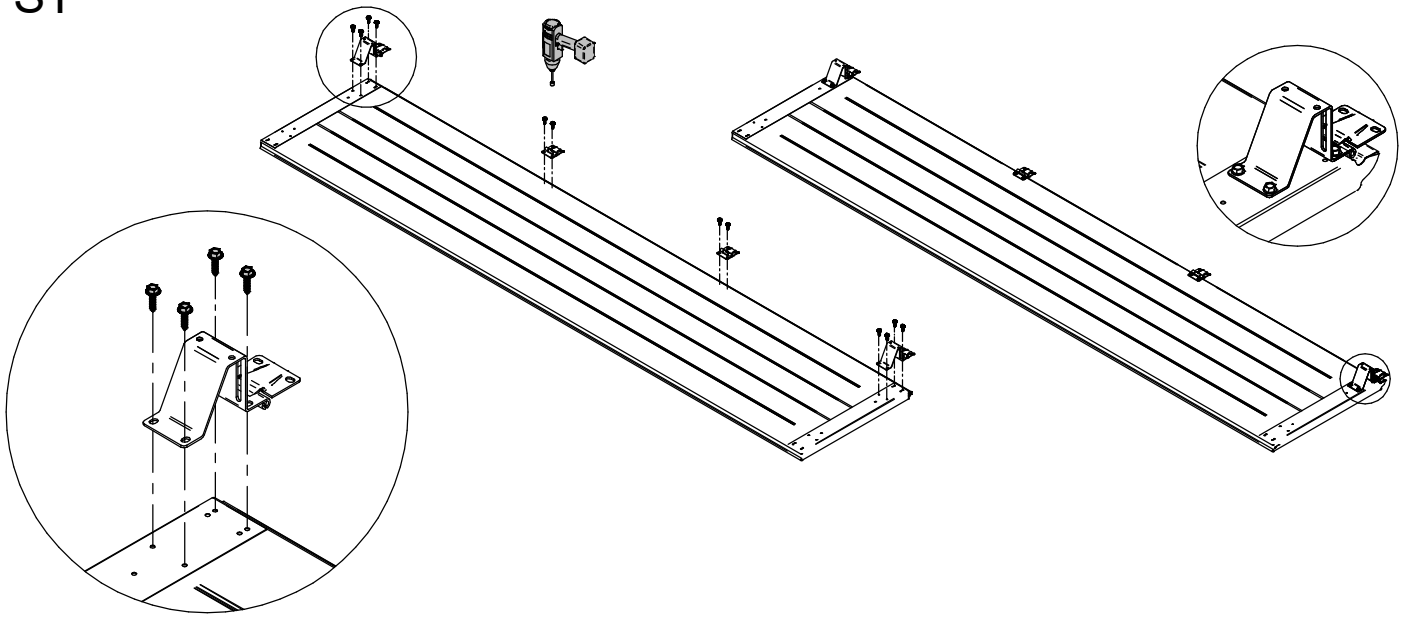

3814 (16mm)/
3812 (25mm)












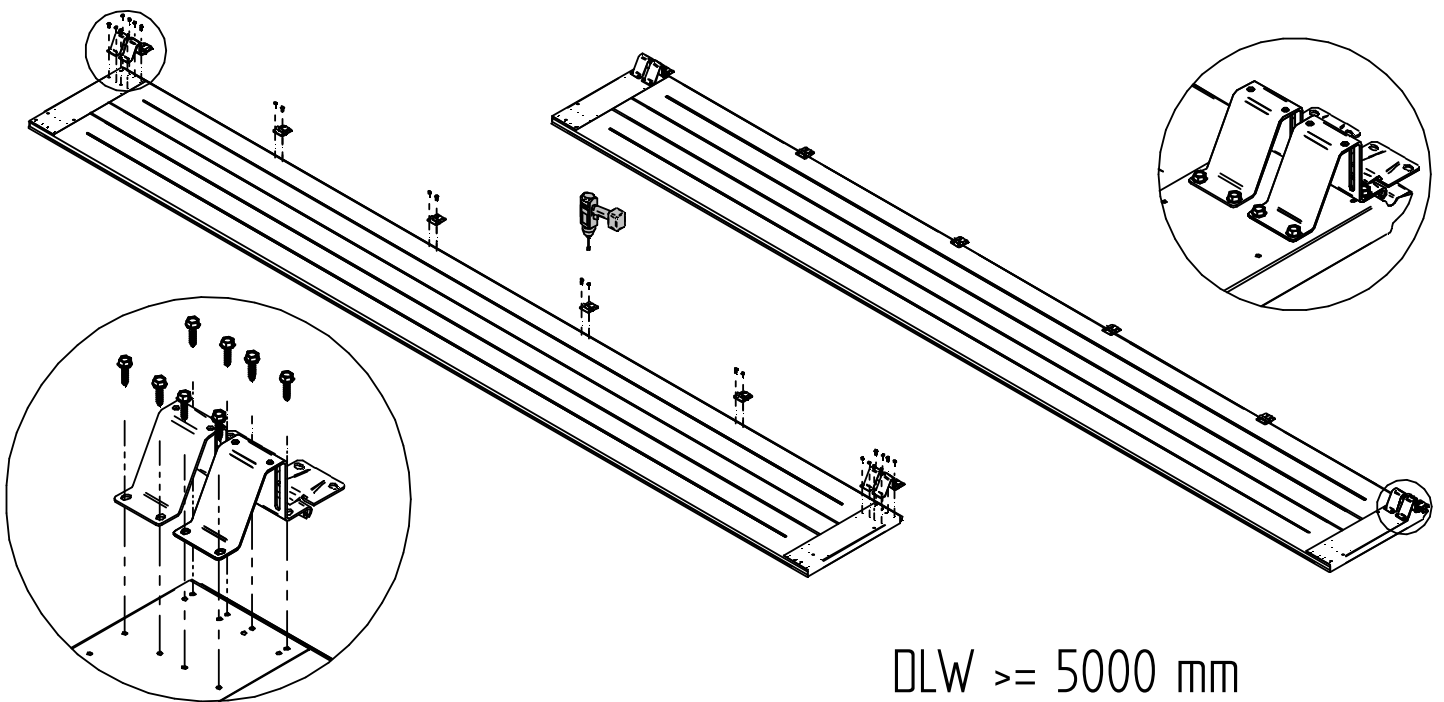
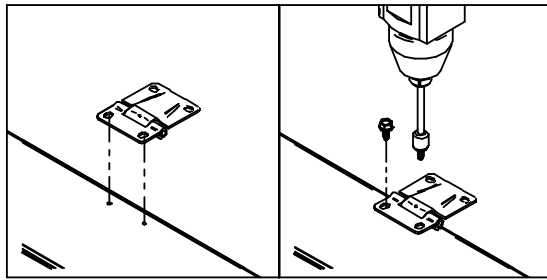





DLW $\geq$ 5000 mm















3814 (16mm)/
3812 (25mm)







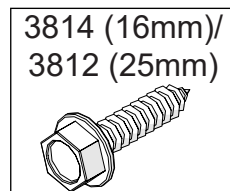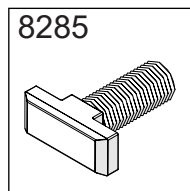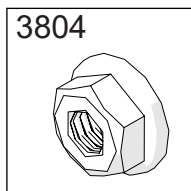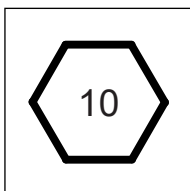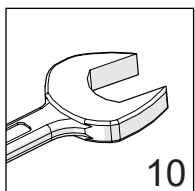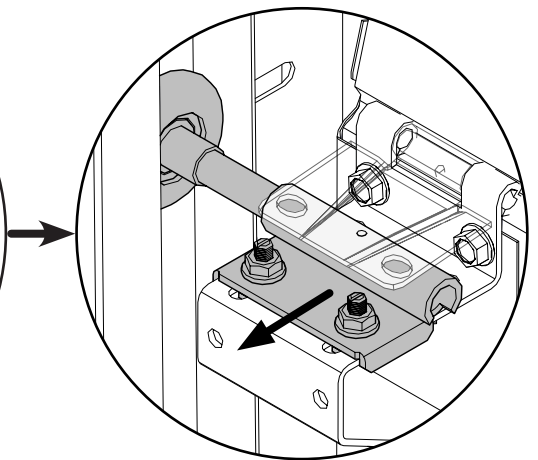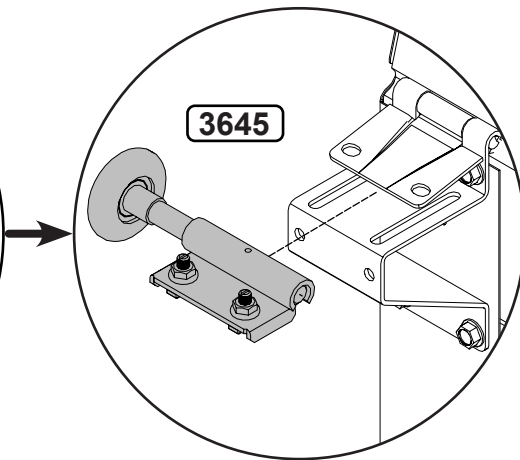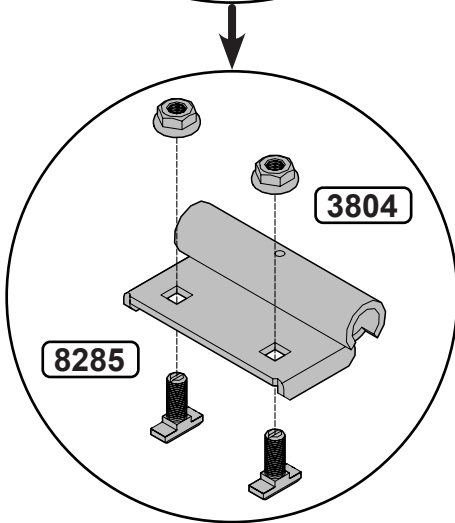
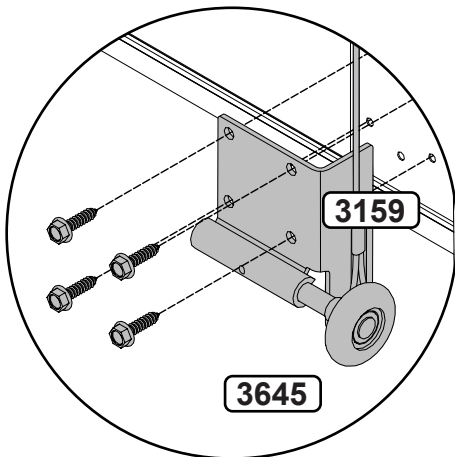
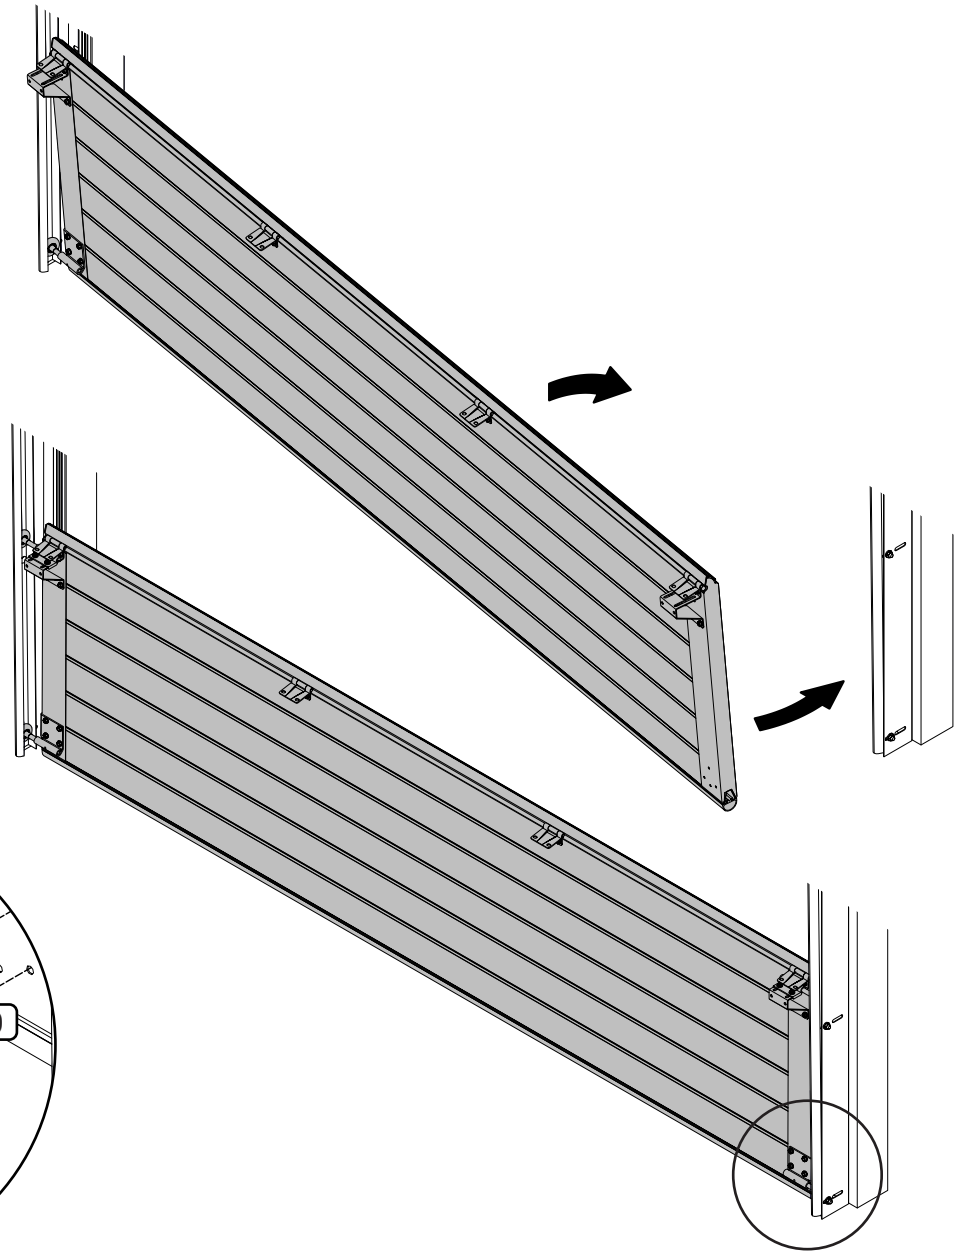



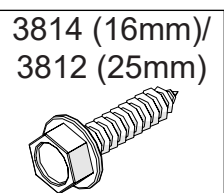
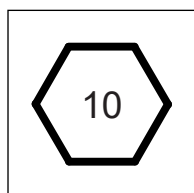
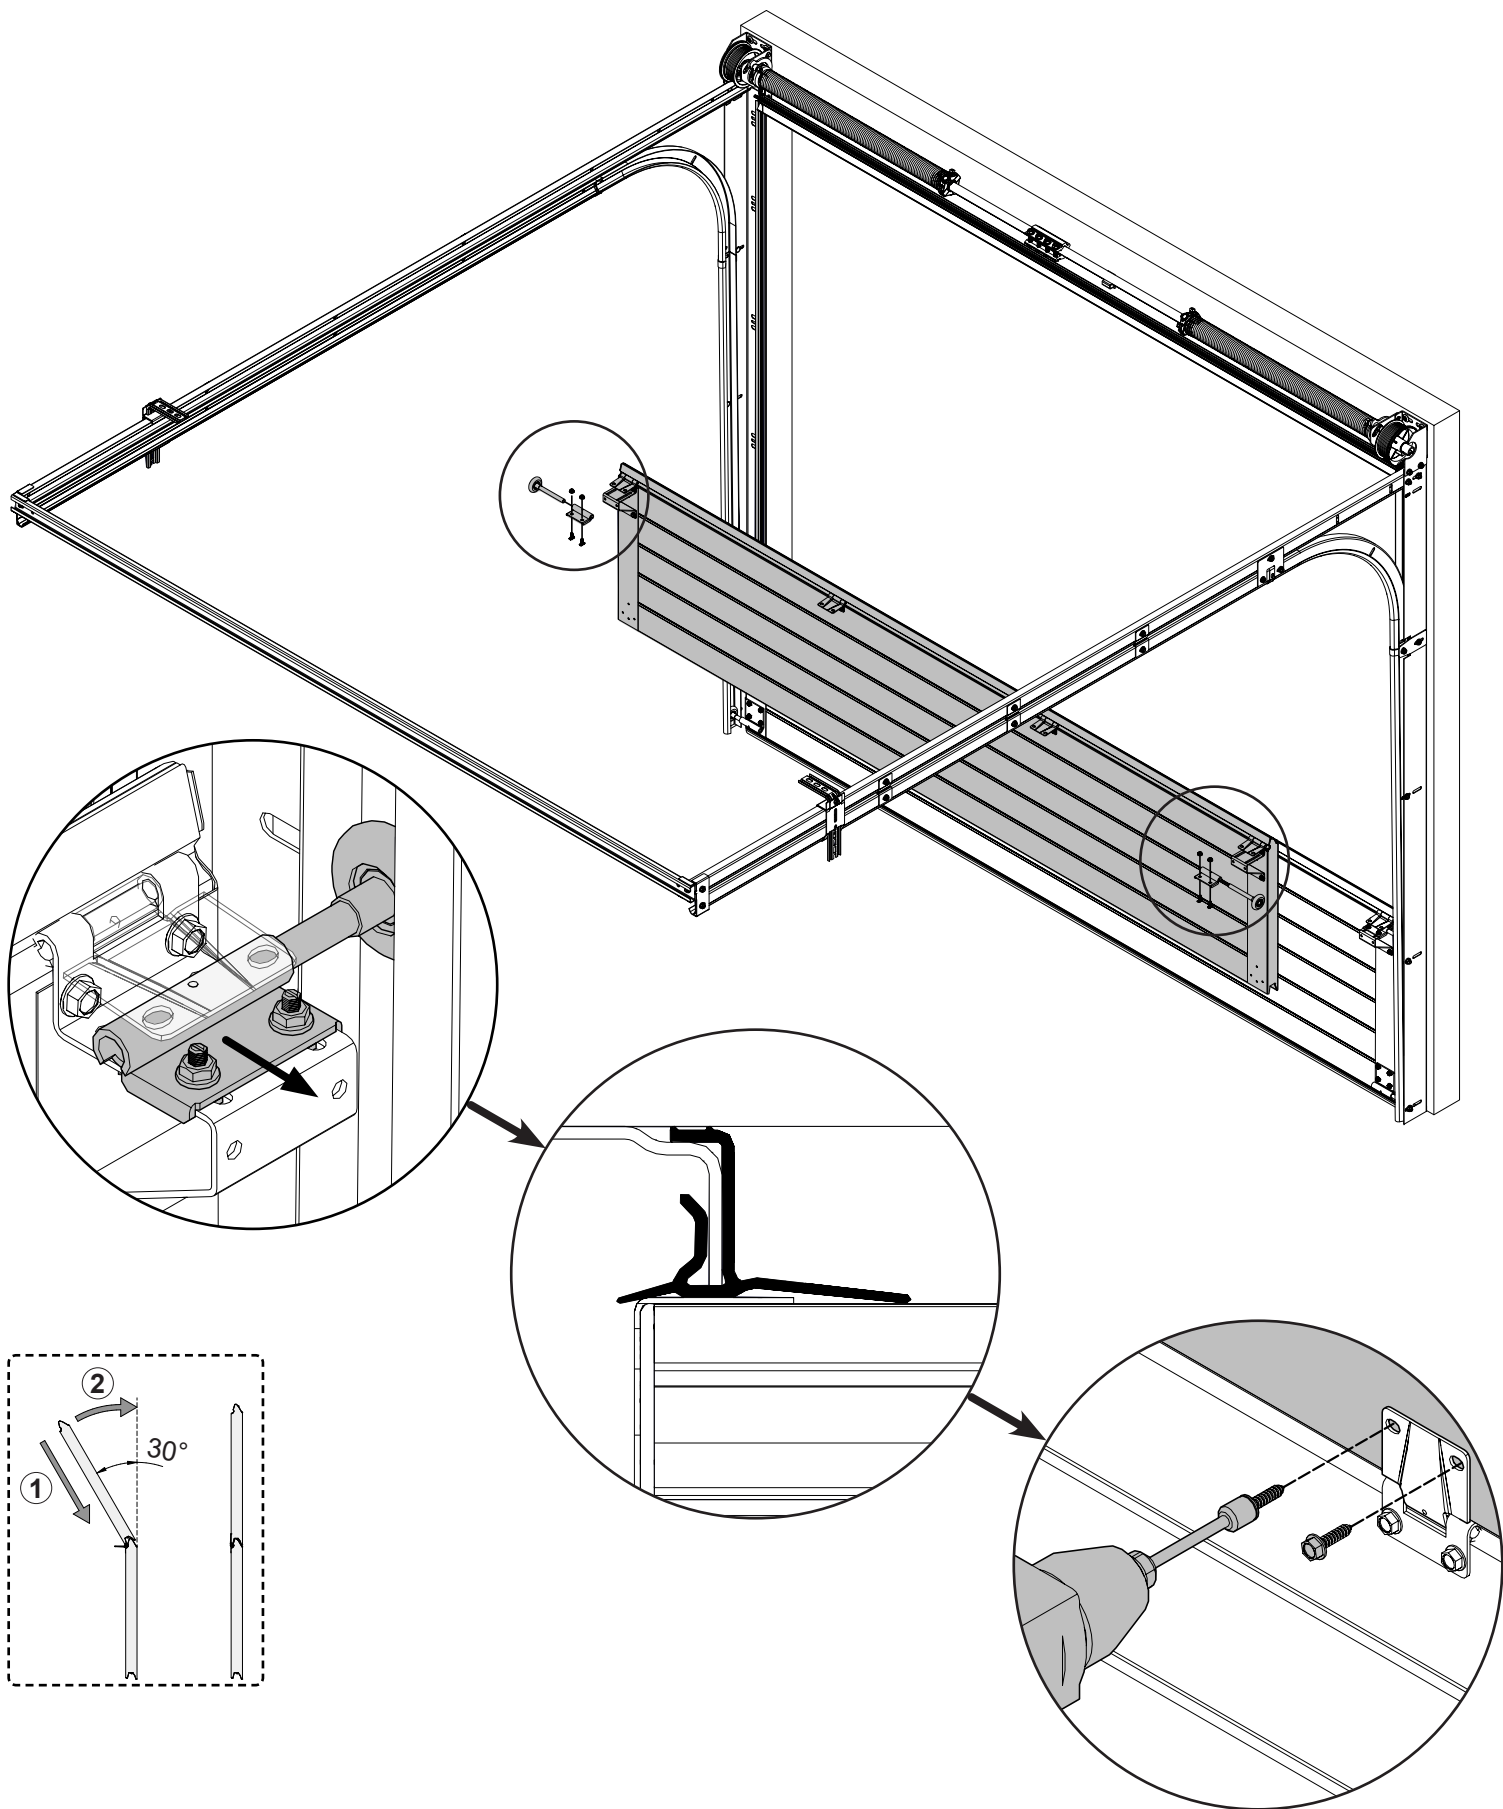


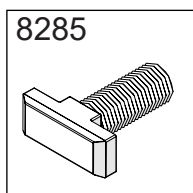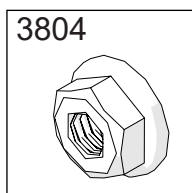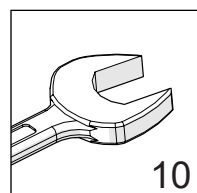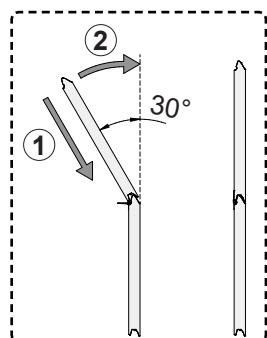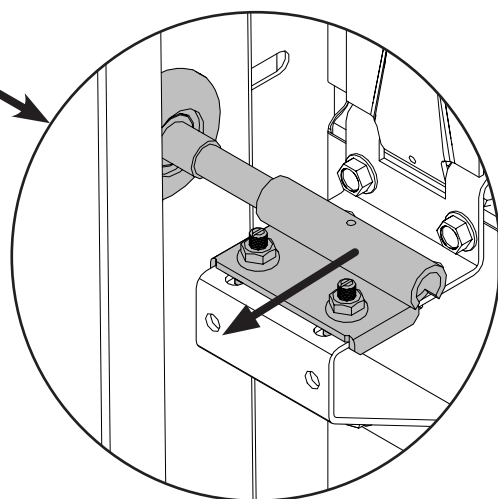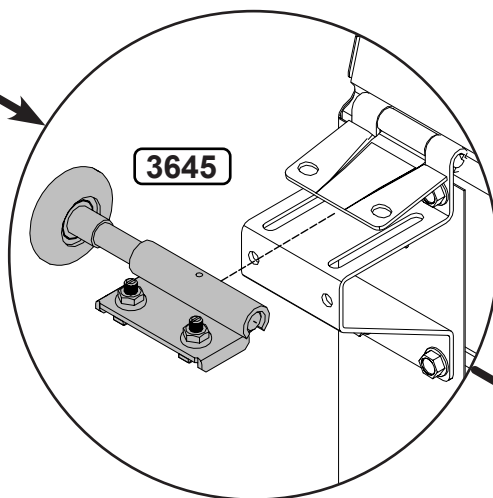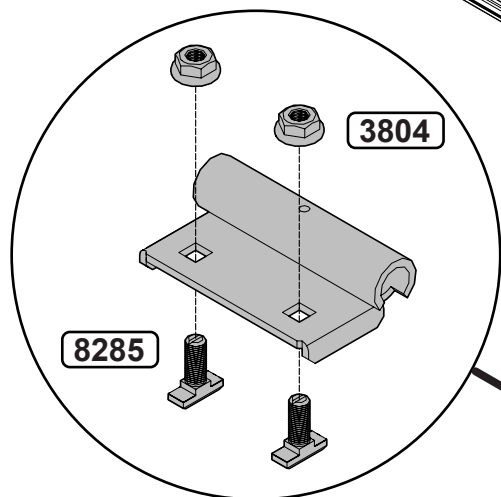
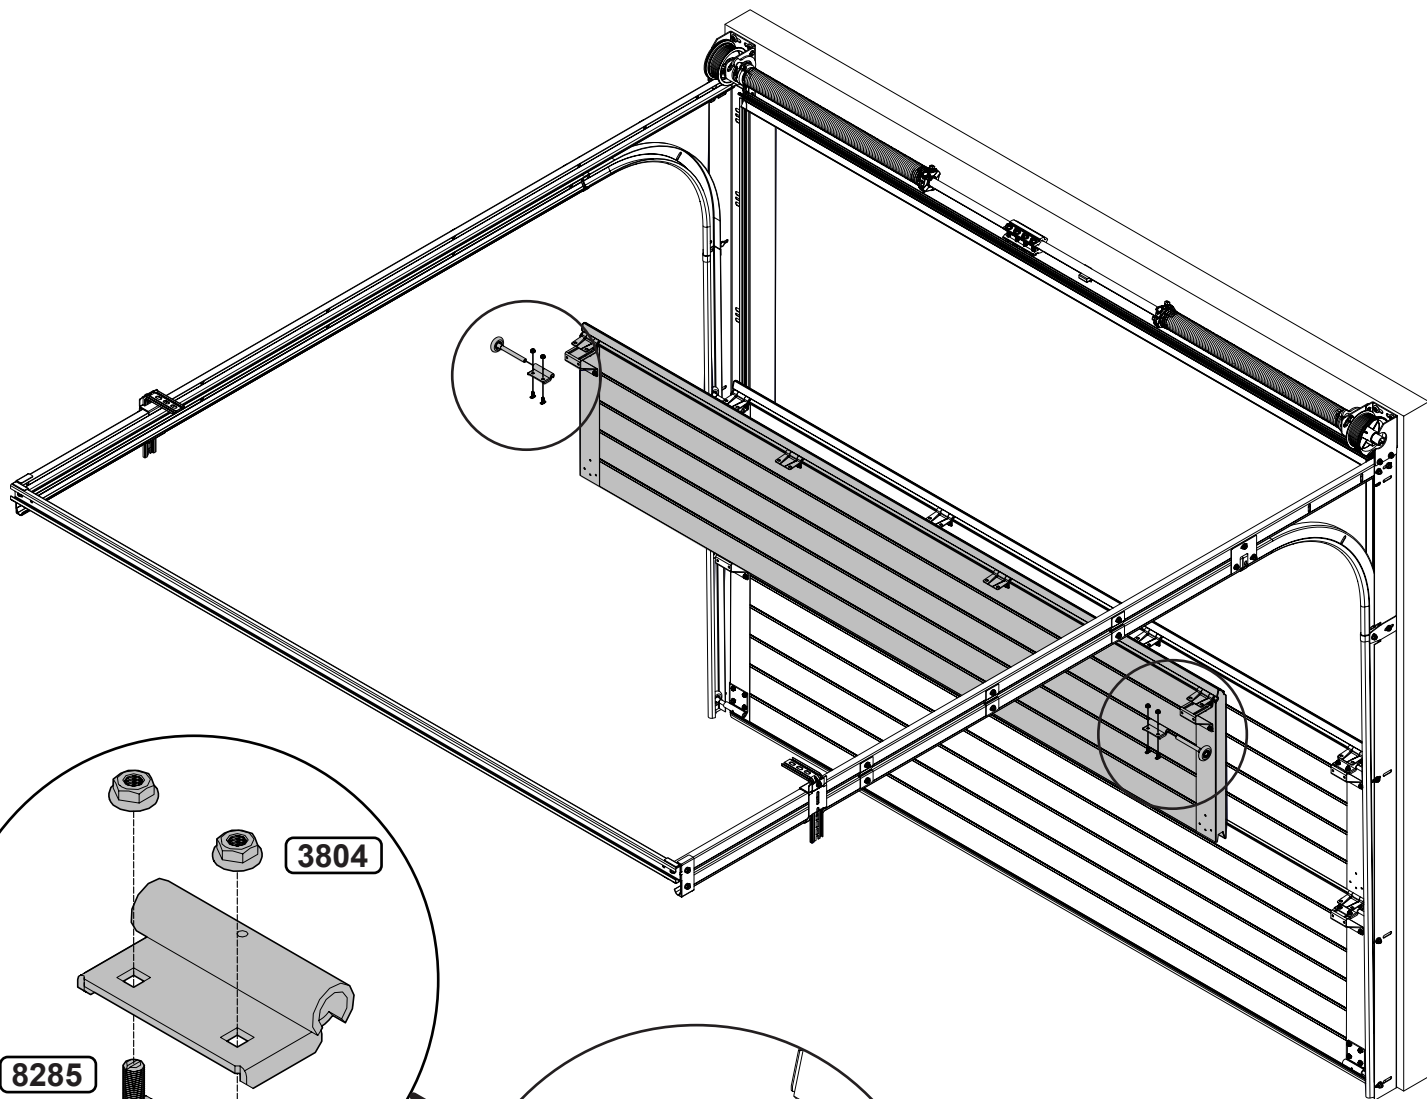


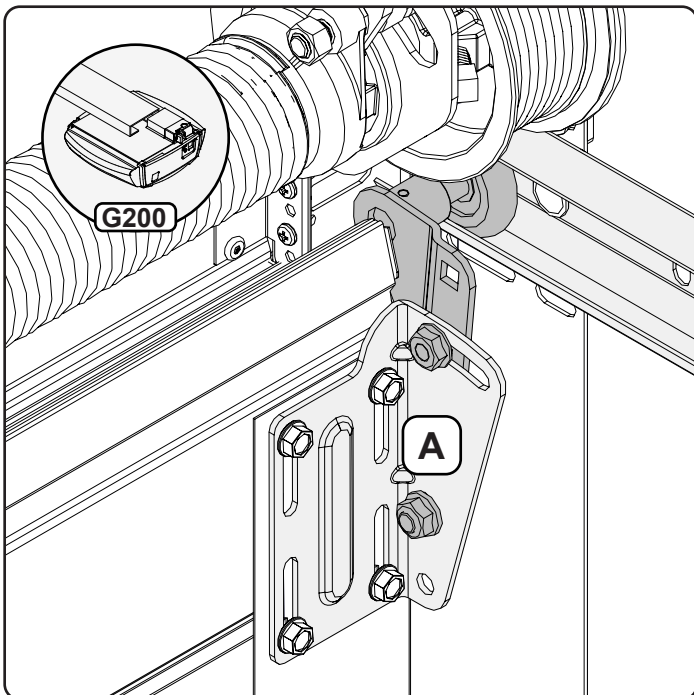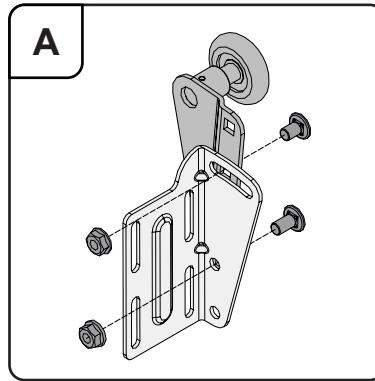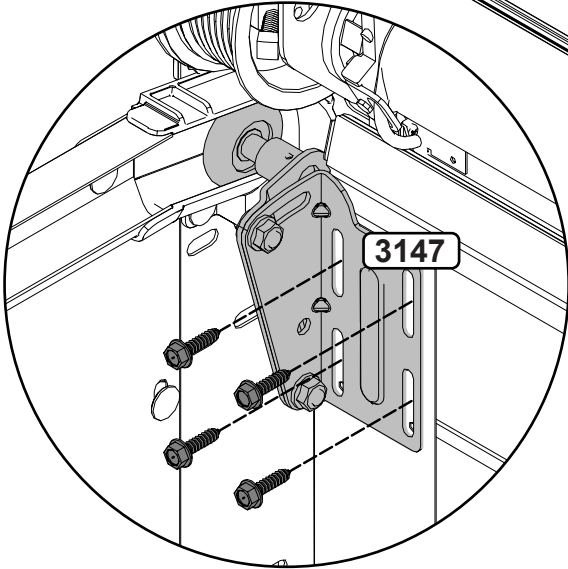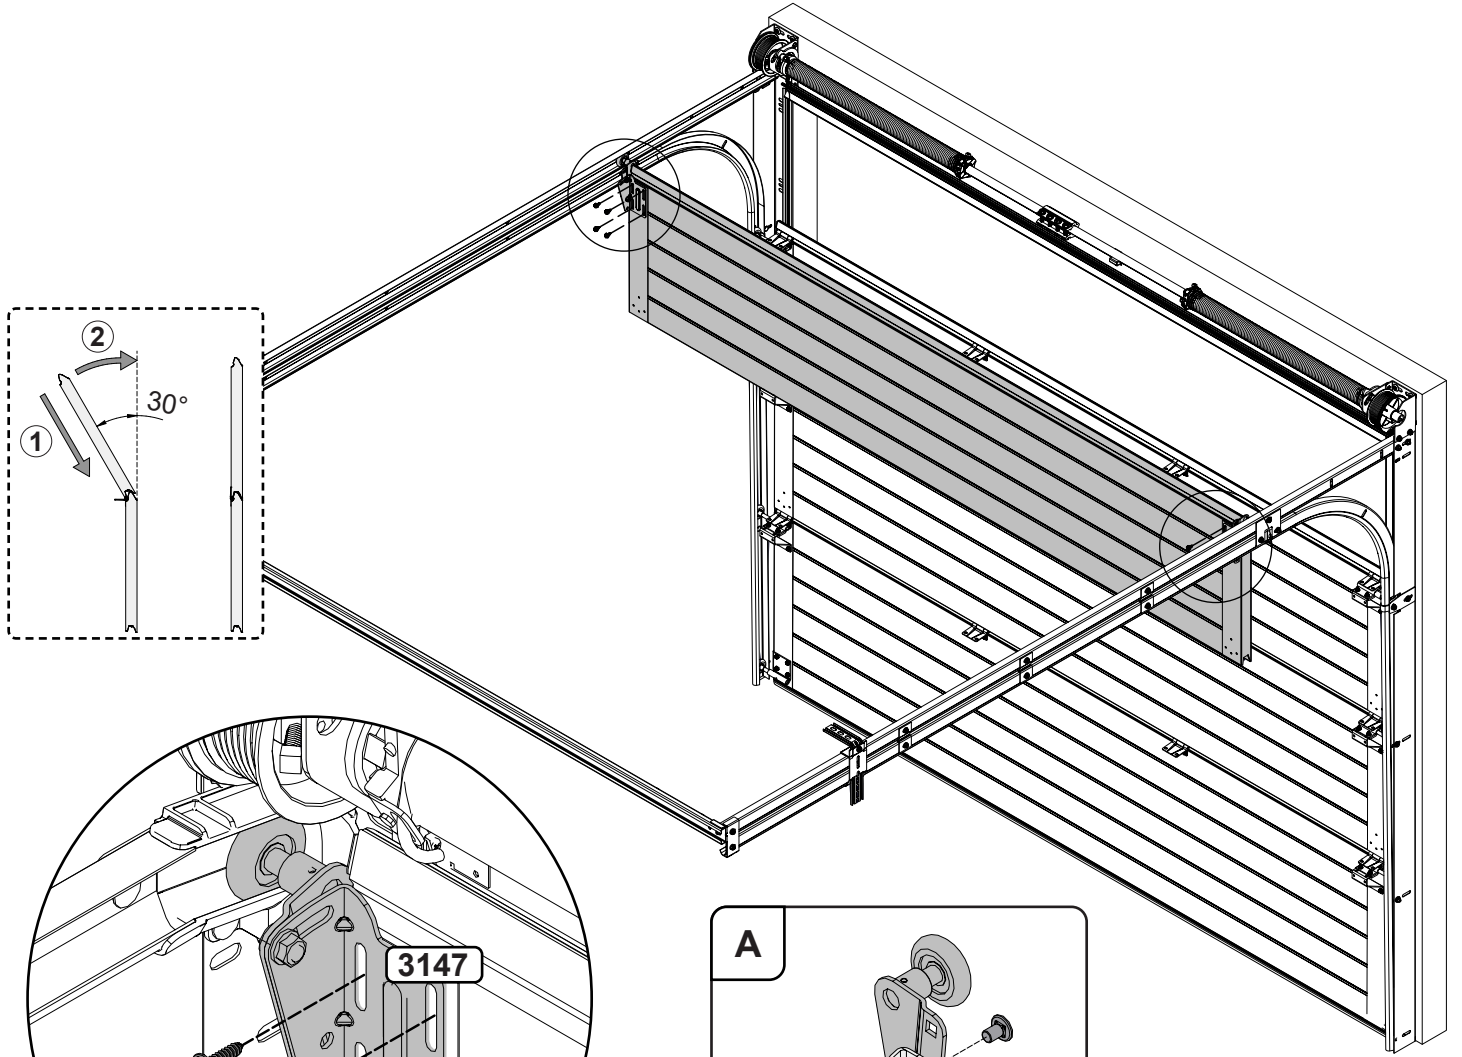

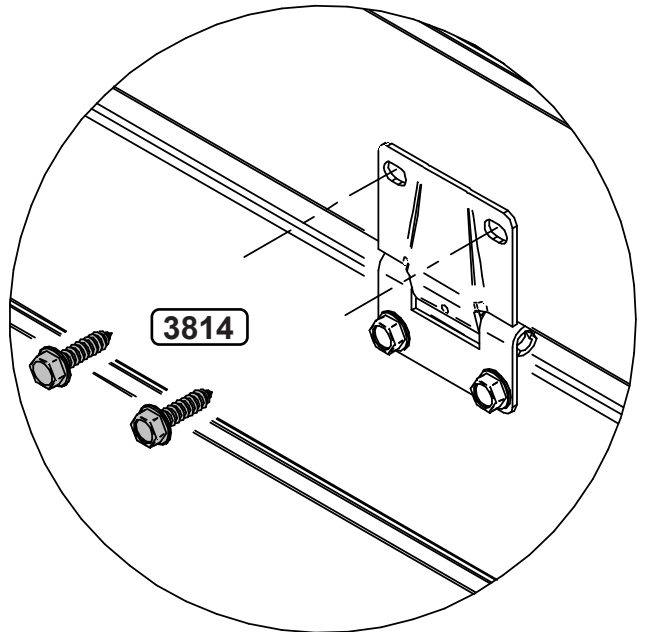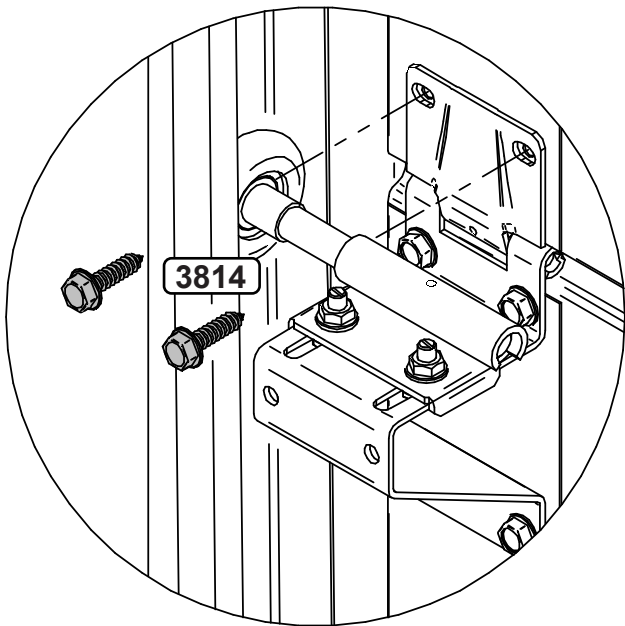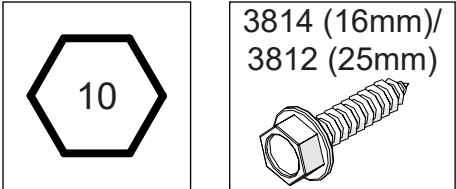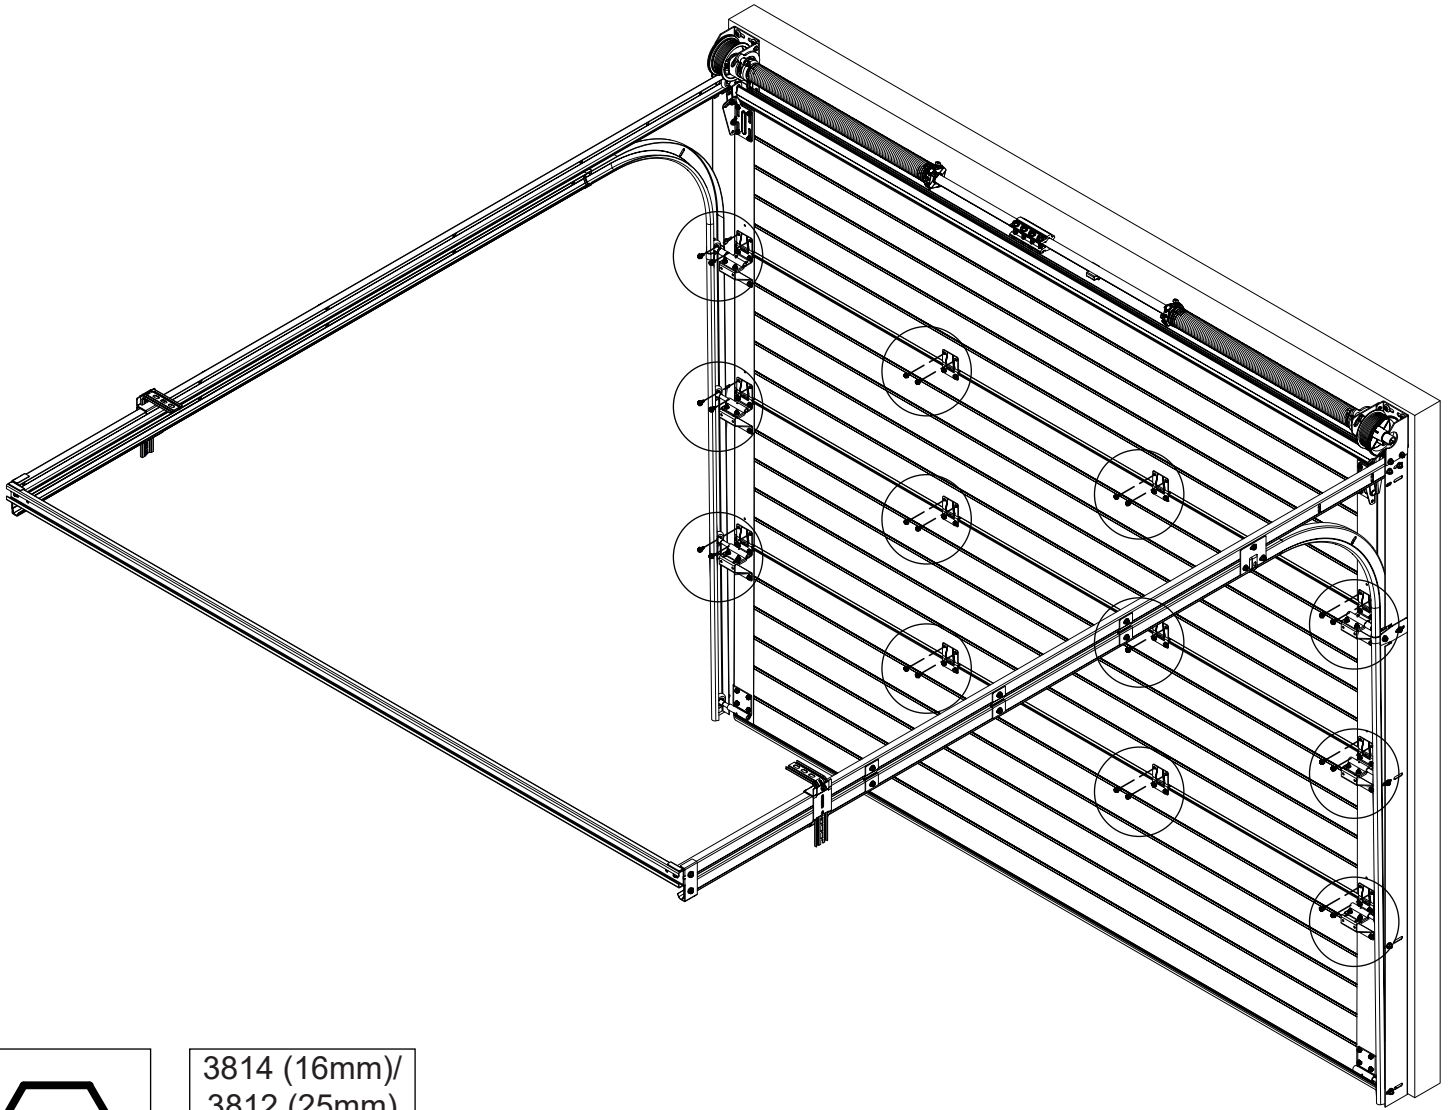

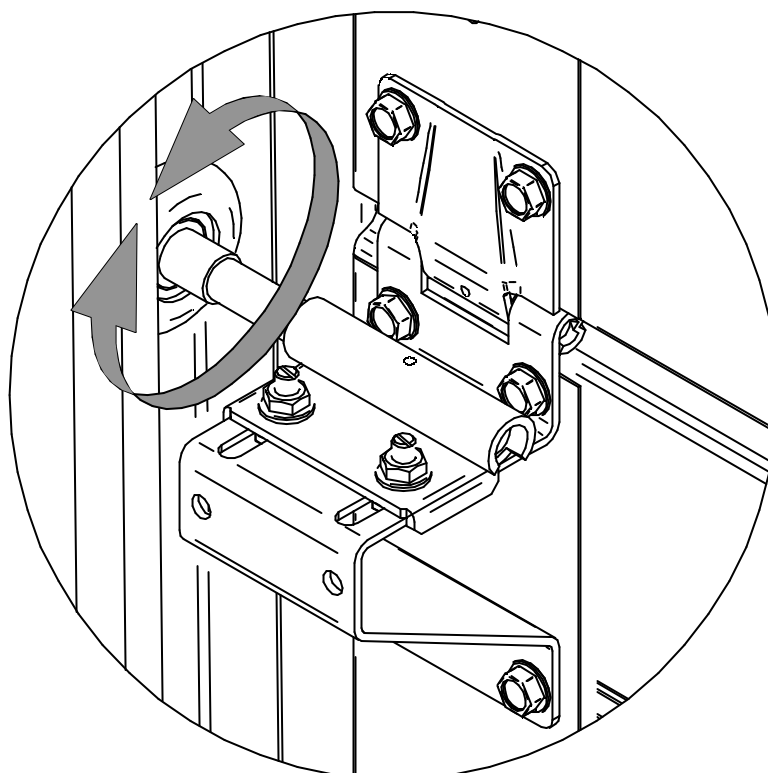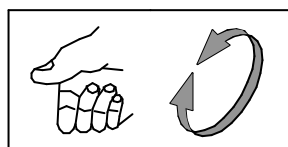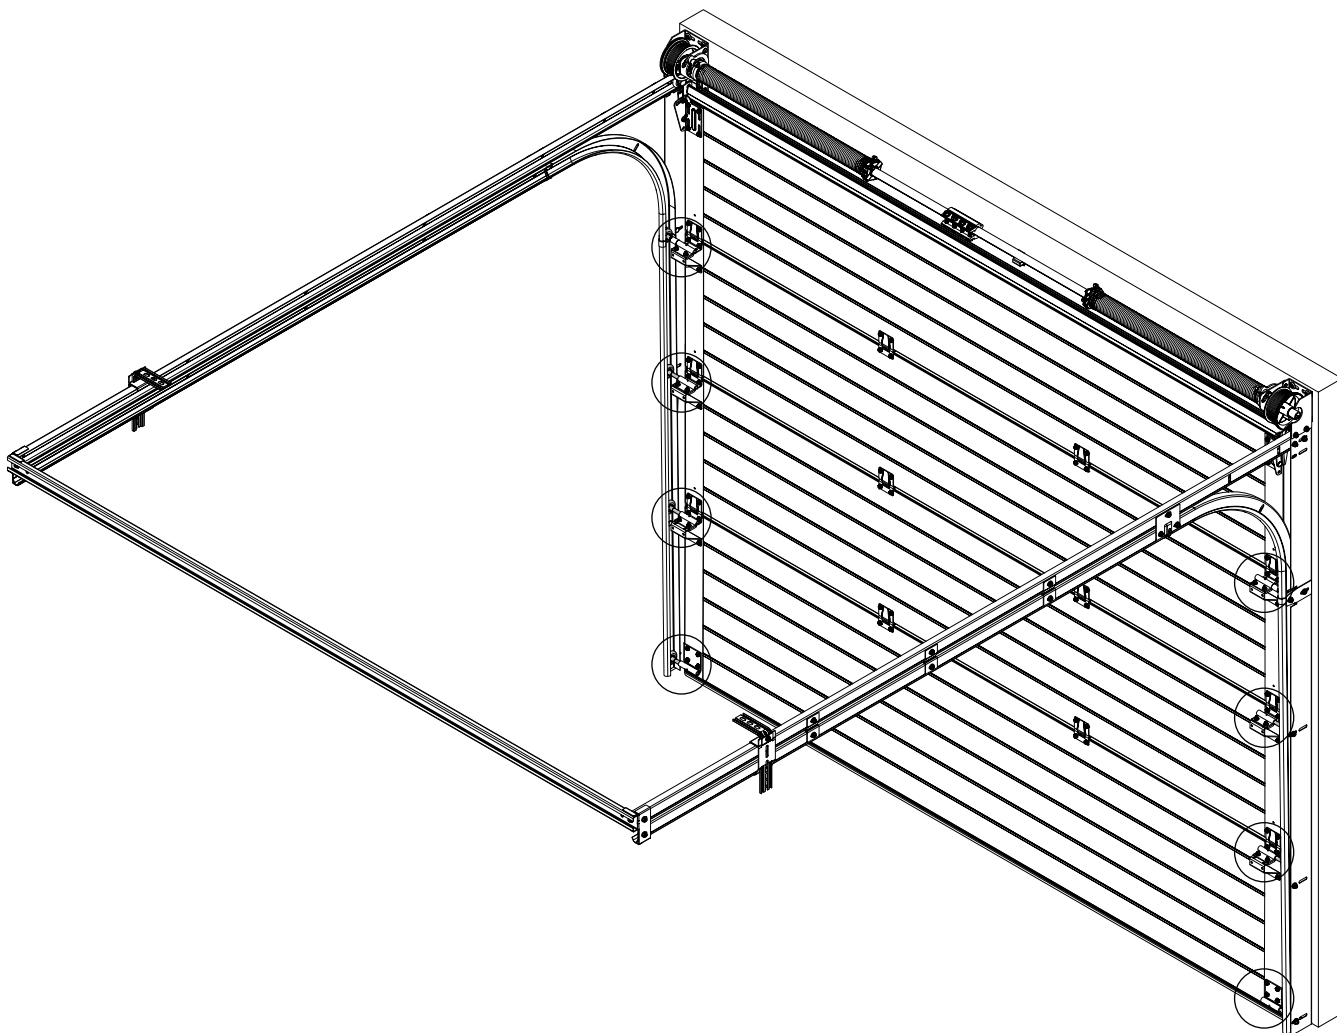

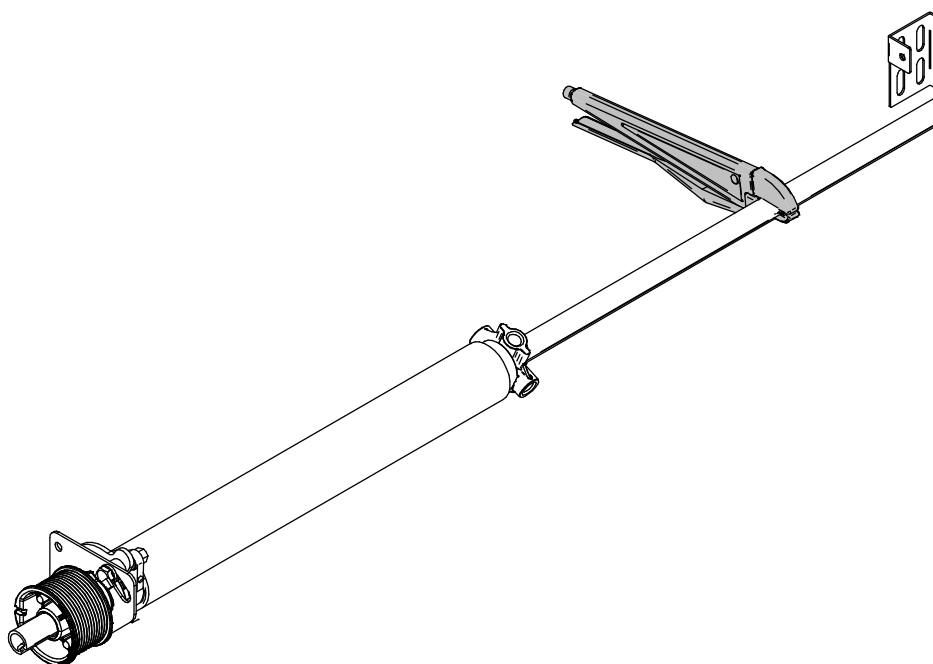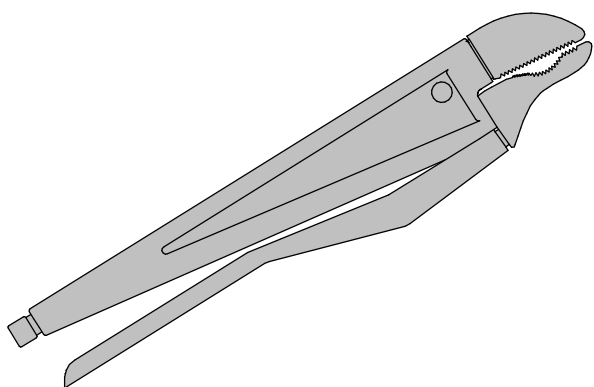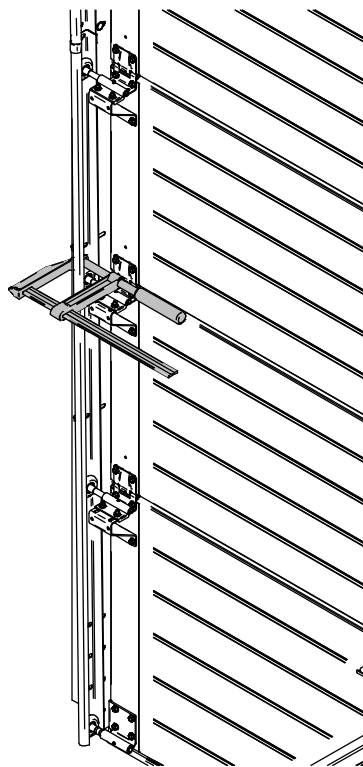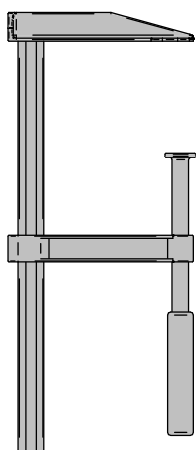

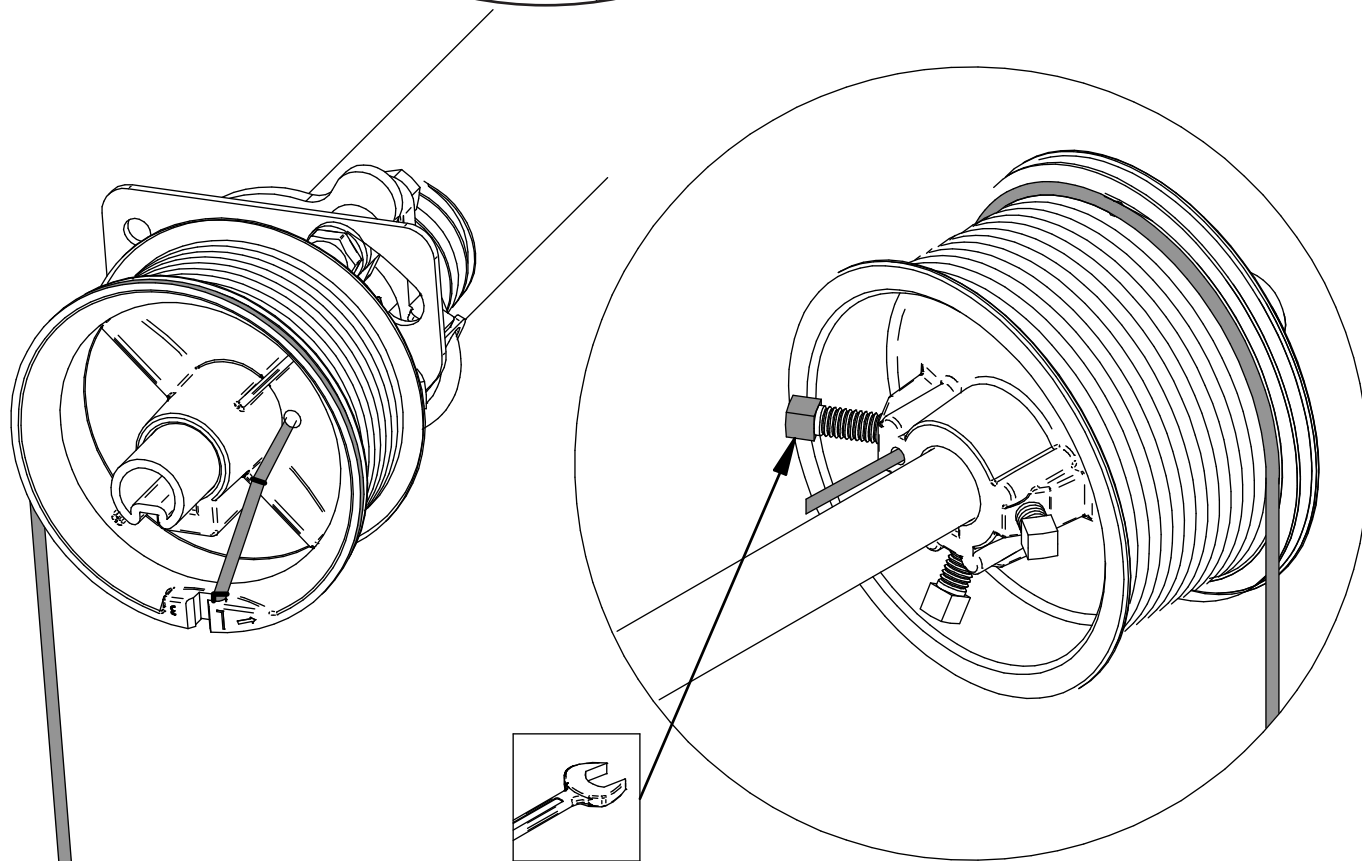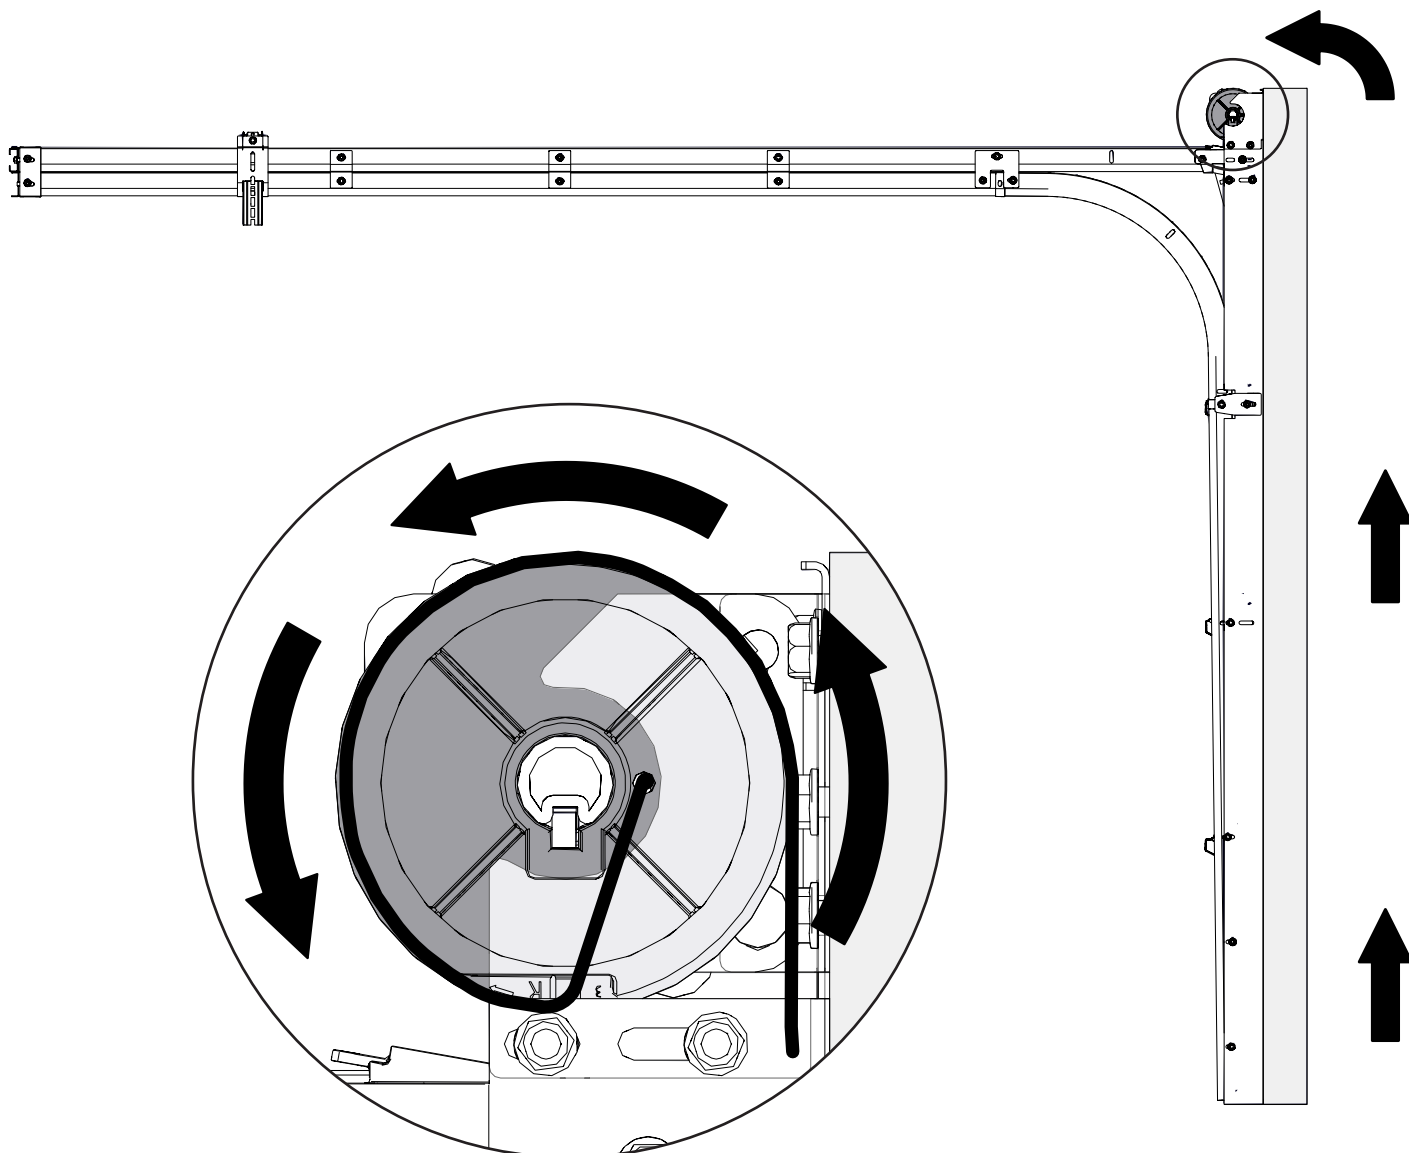

Hardware

Customer Ref.:

Our reference:

Turns x 360°




Qty	Doortype	DLW	DLH	Sections	Fields	Assembly	Weight	Turns
		x						10.1
Qty	Unit	Art. num.	Article description					Length
1	piece	0461	Spring break device Residential 1" right Ø 51mm SC					
1	piece	0462	Spring break device Residential 1" left Ø 51mm SC					

VEER / FEDER / SPRING / RESSORT < 67 mm


TENSION BAR

STAAL / STAHL / STEEL / ACIER 52


1

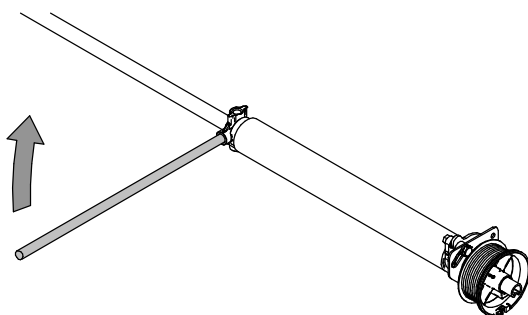


2

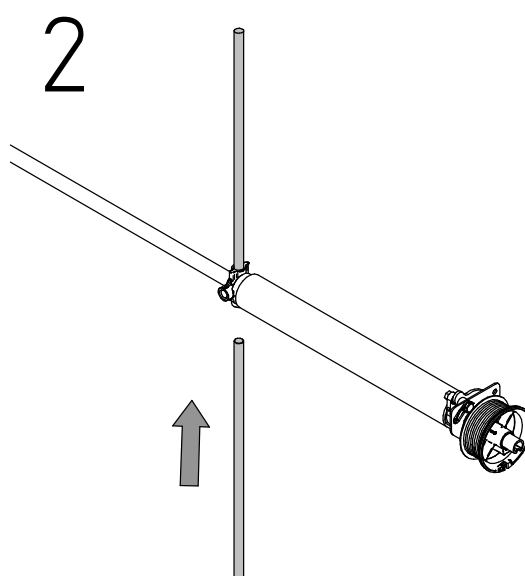


3



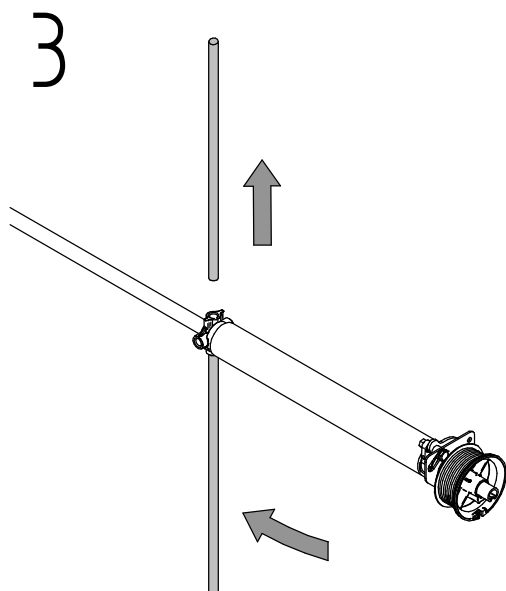










4

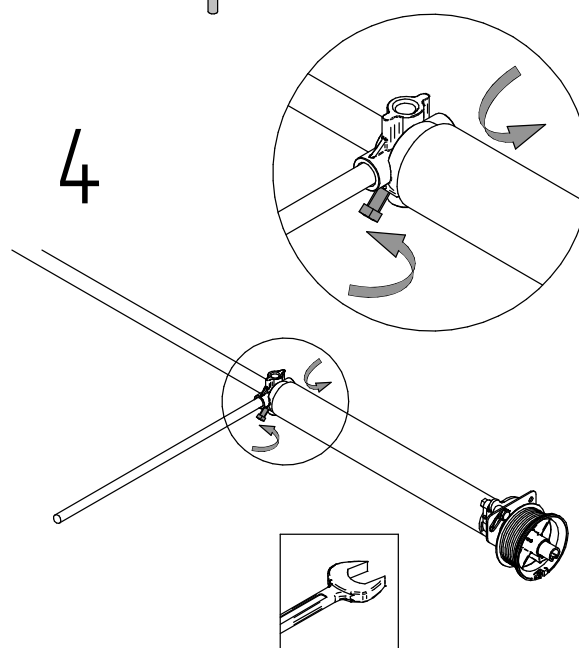


EN: Correct fastening of winding plug





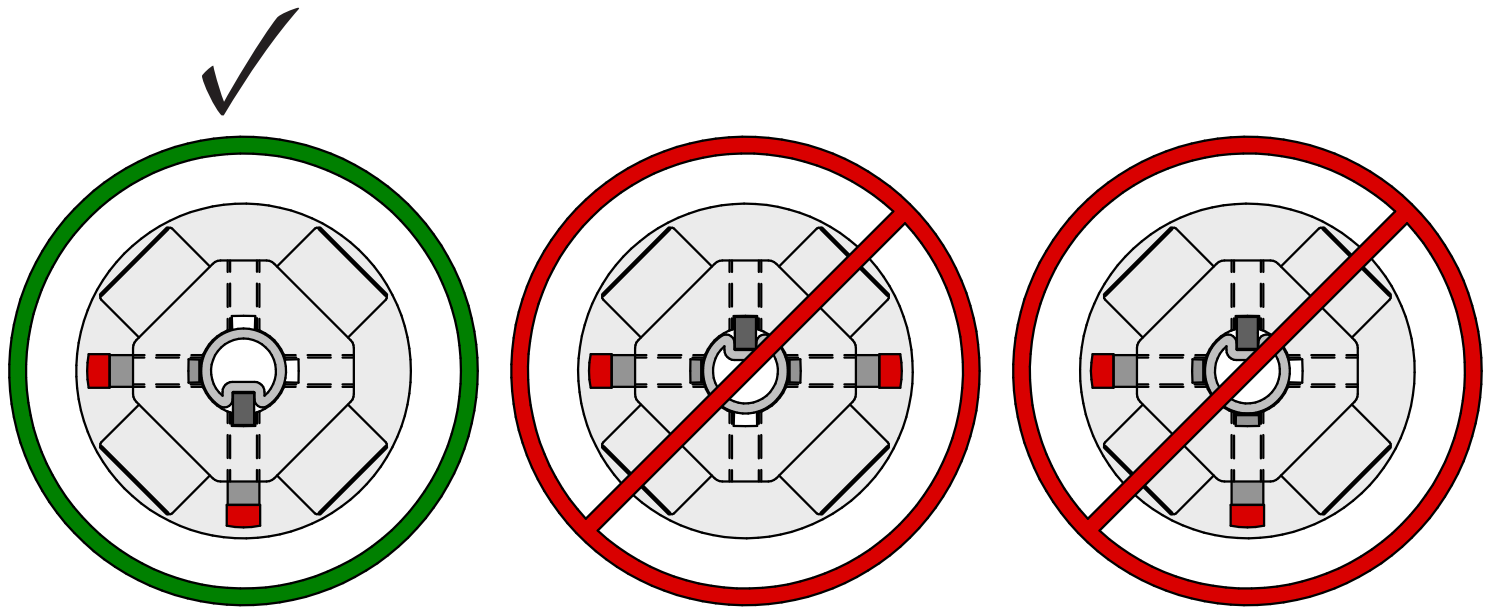


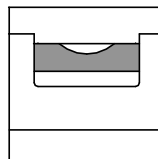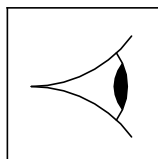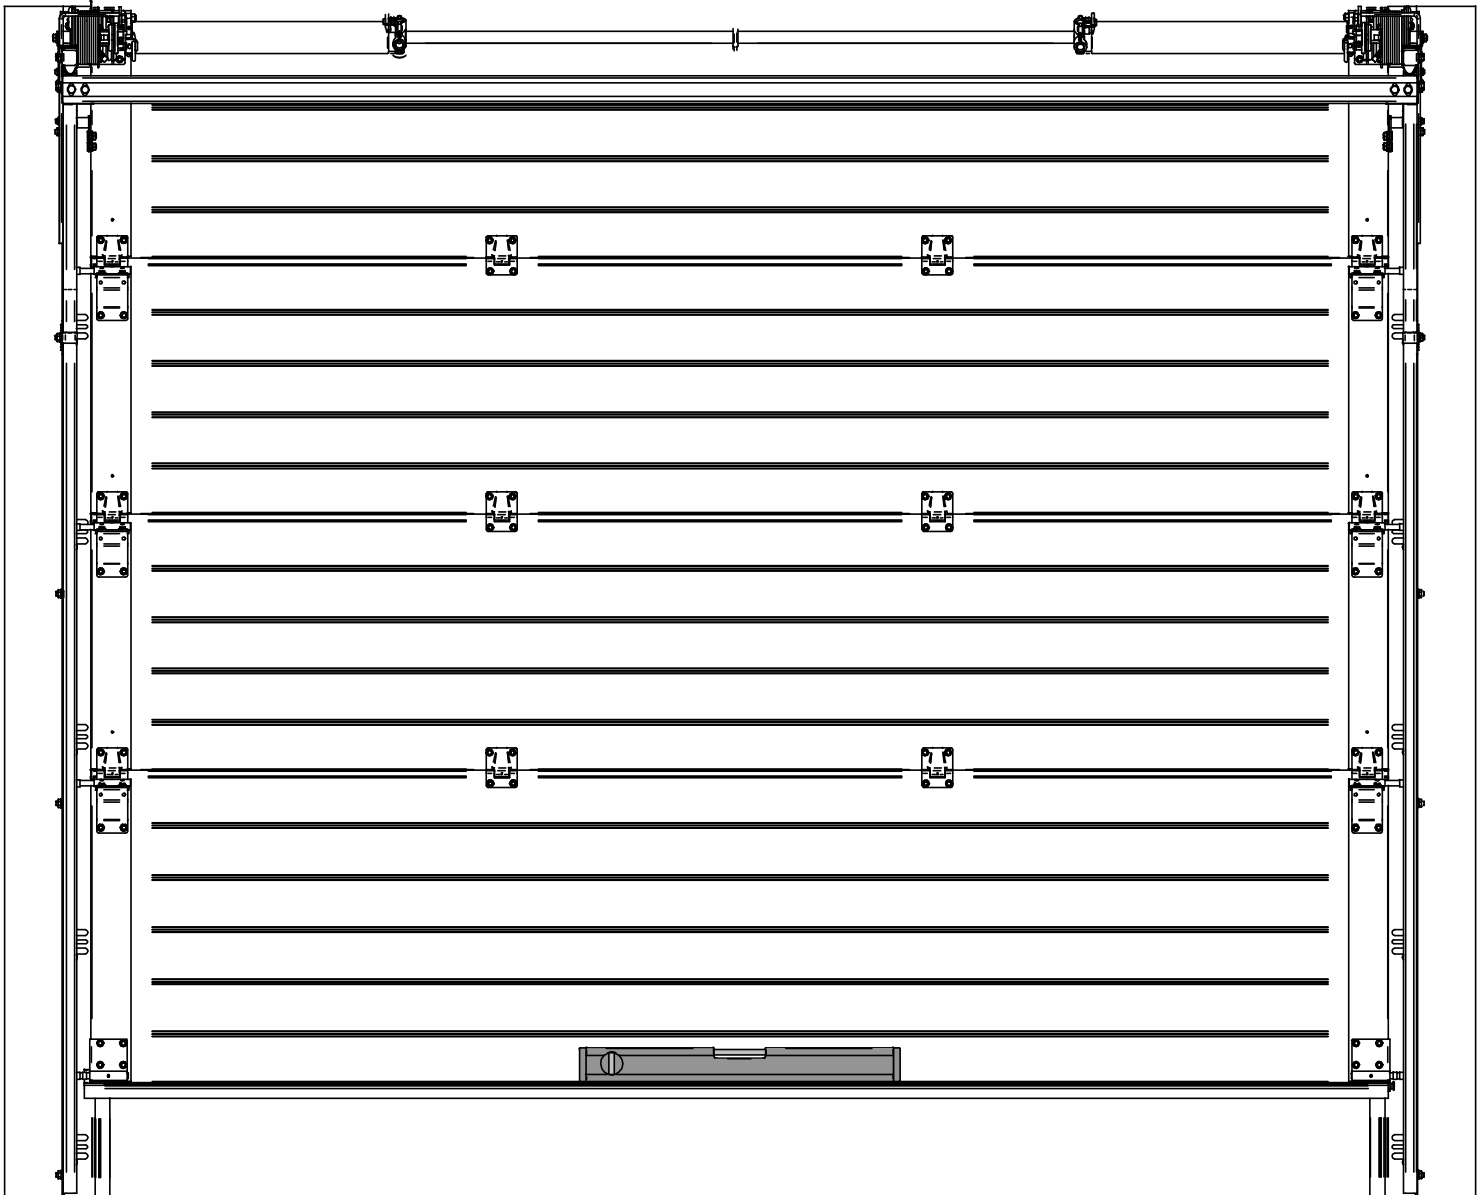

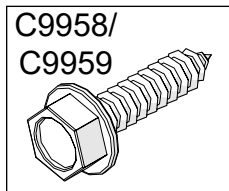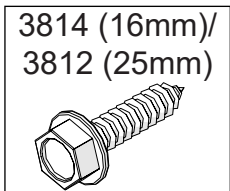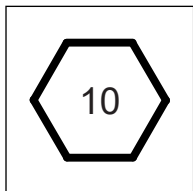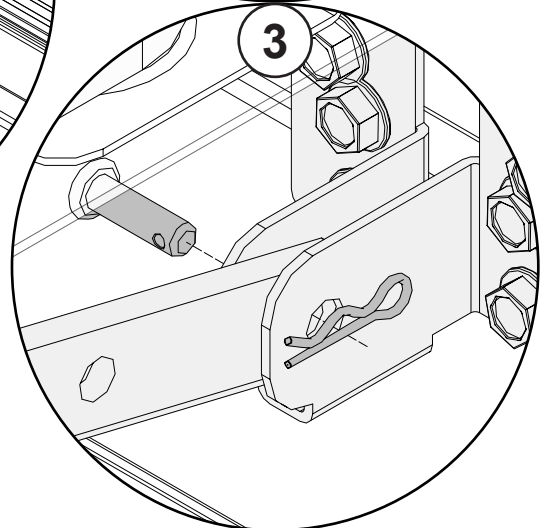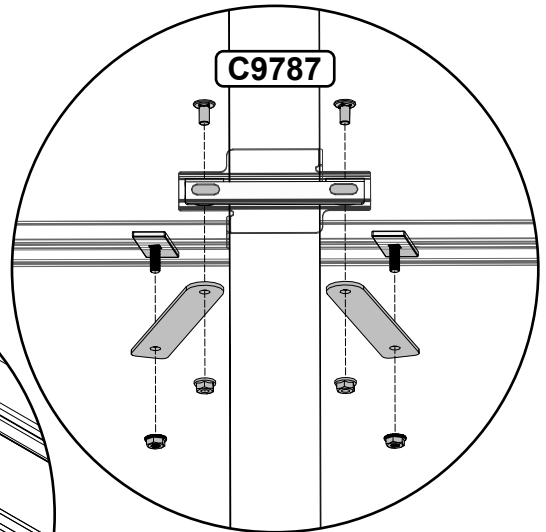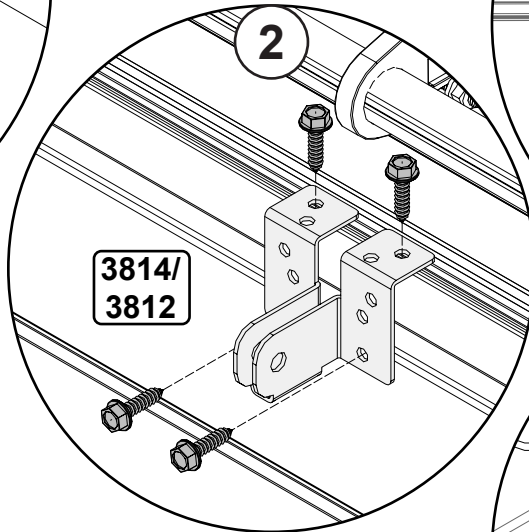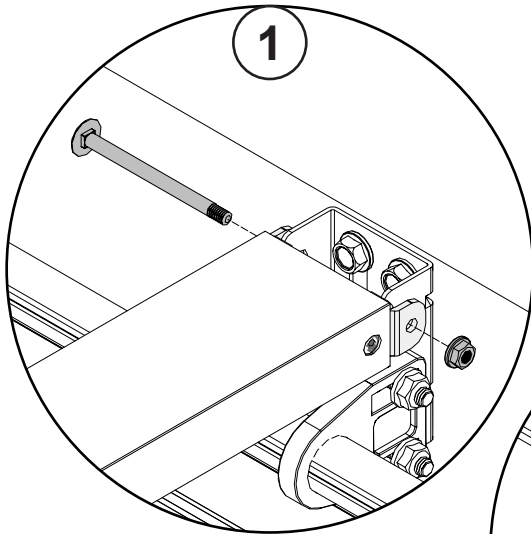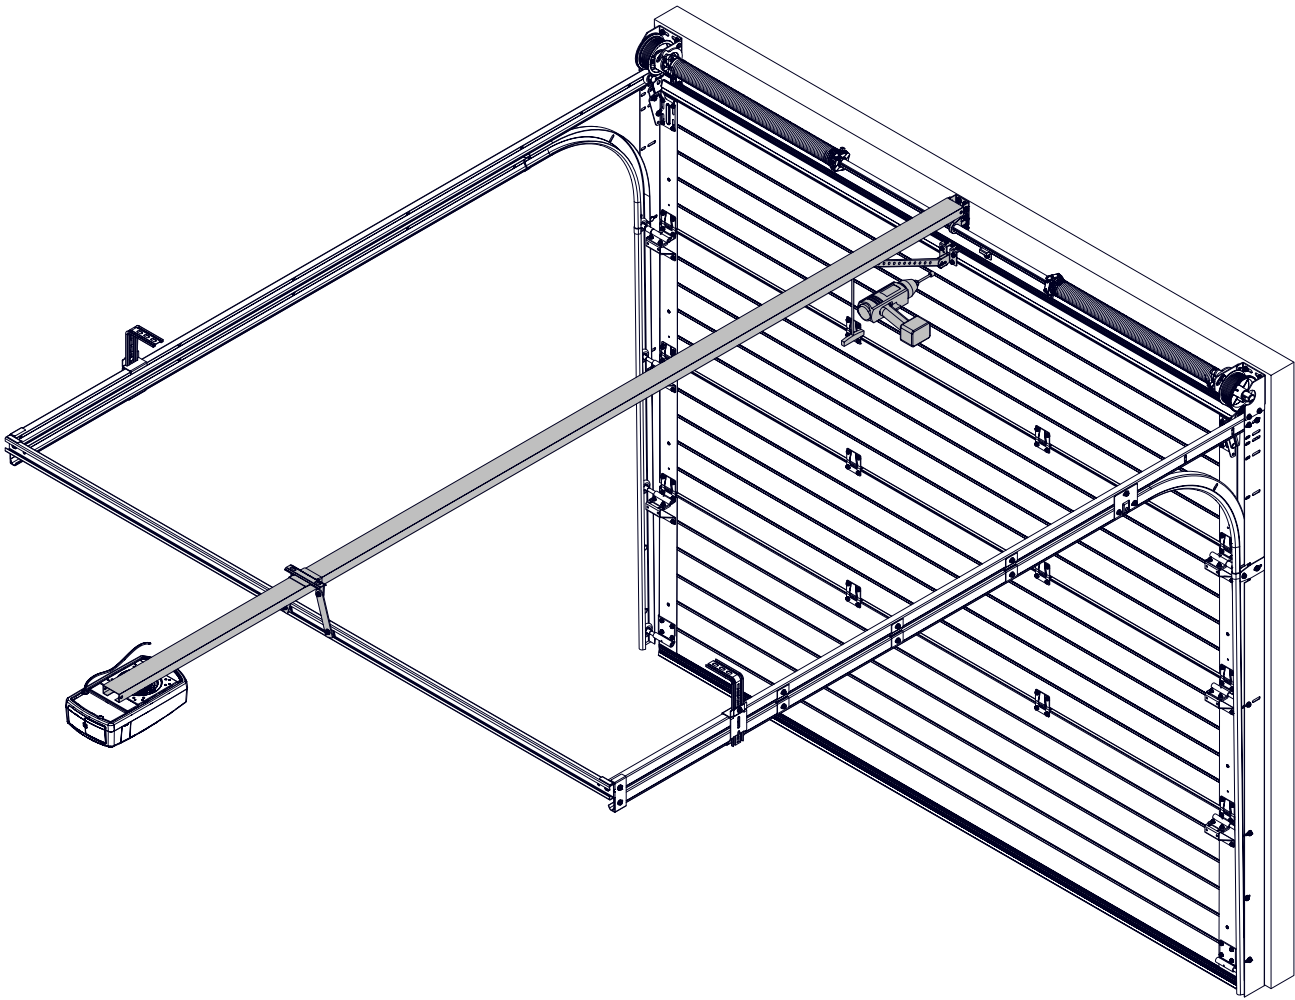

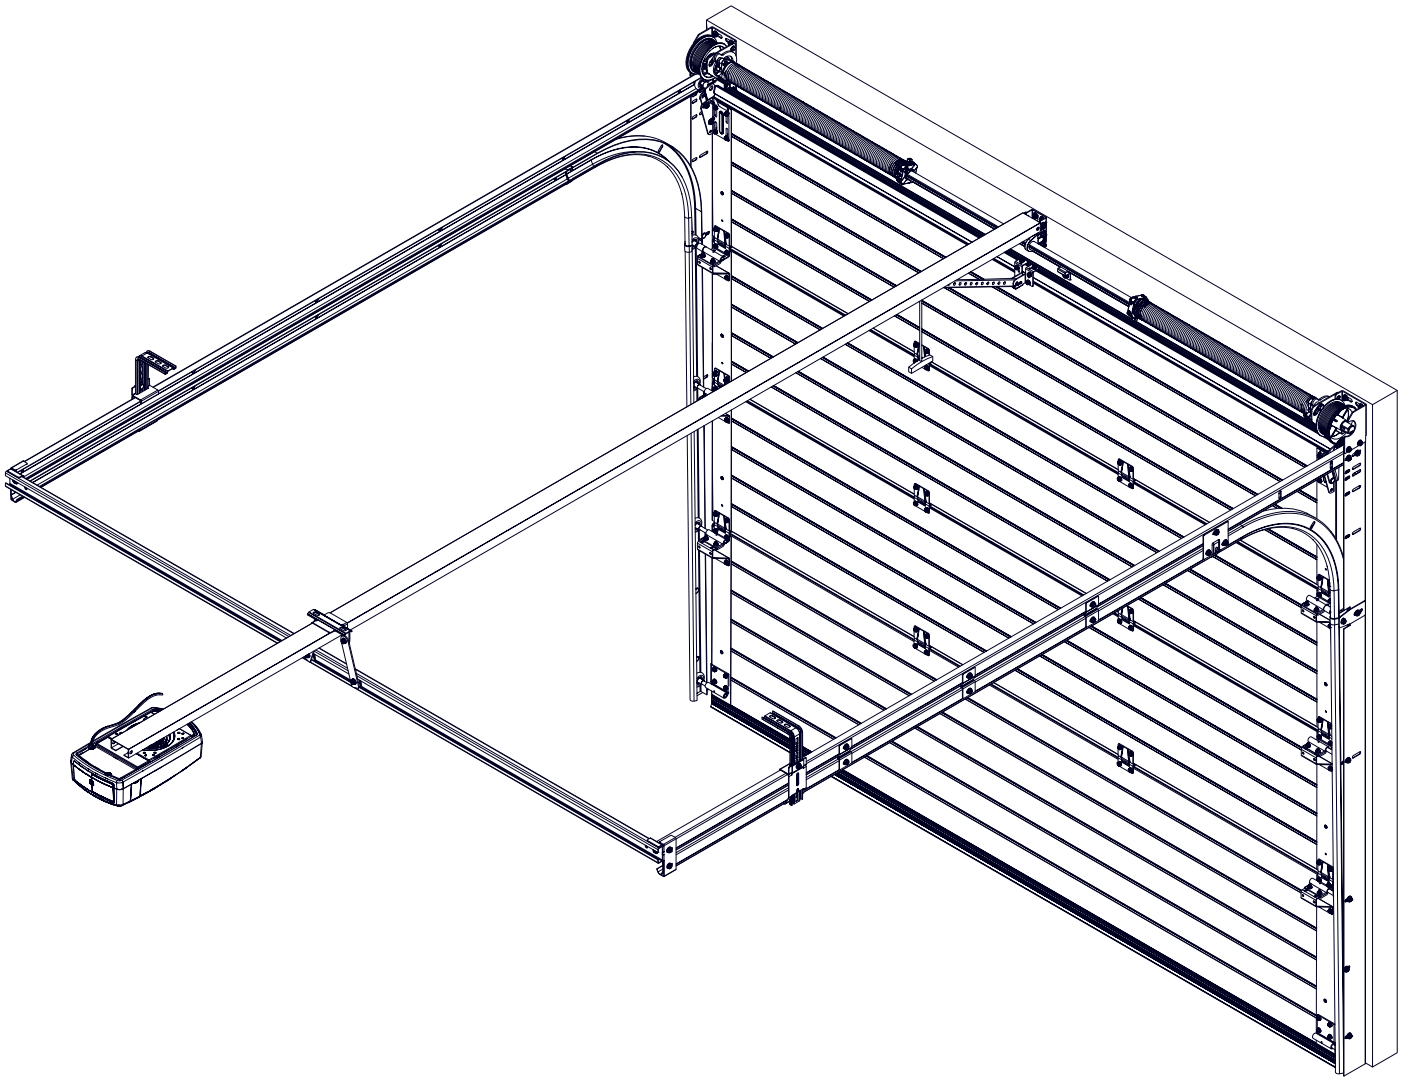

DMB = ≥ 5000

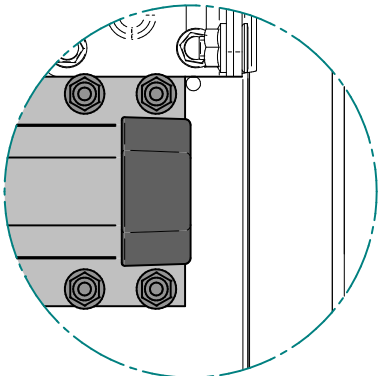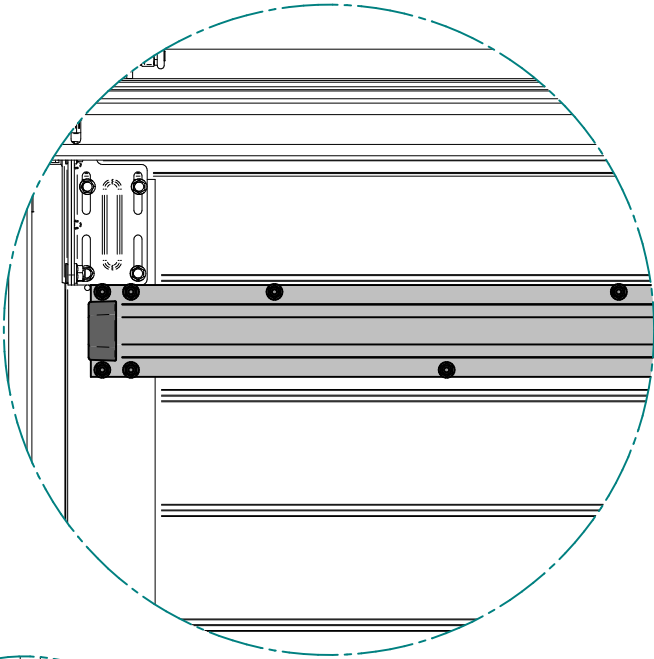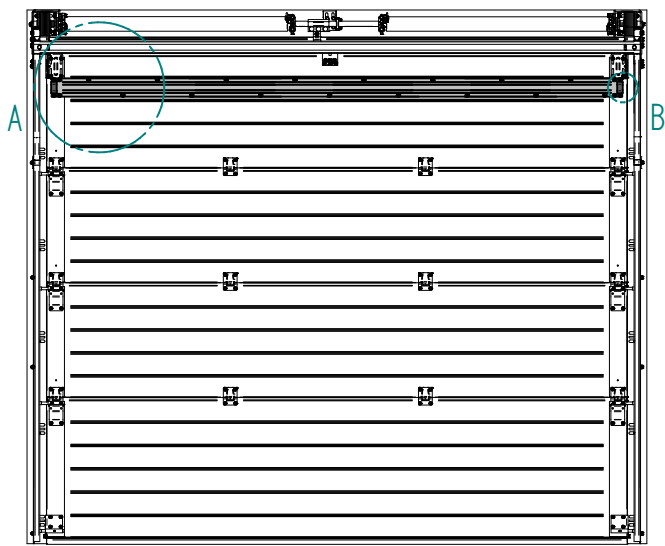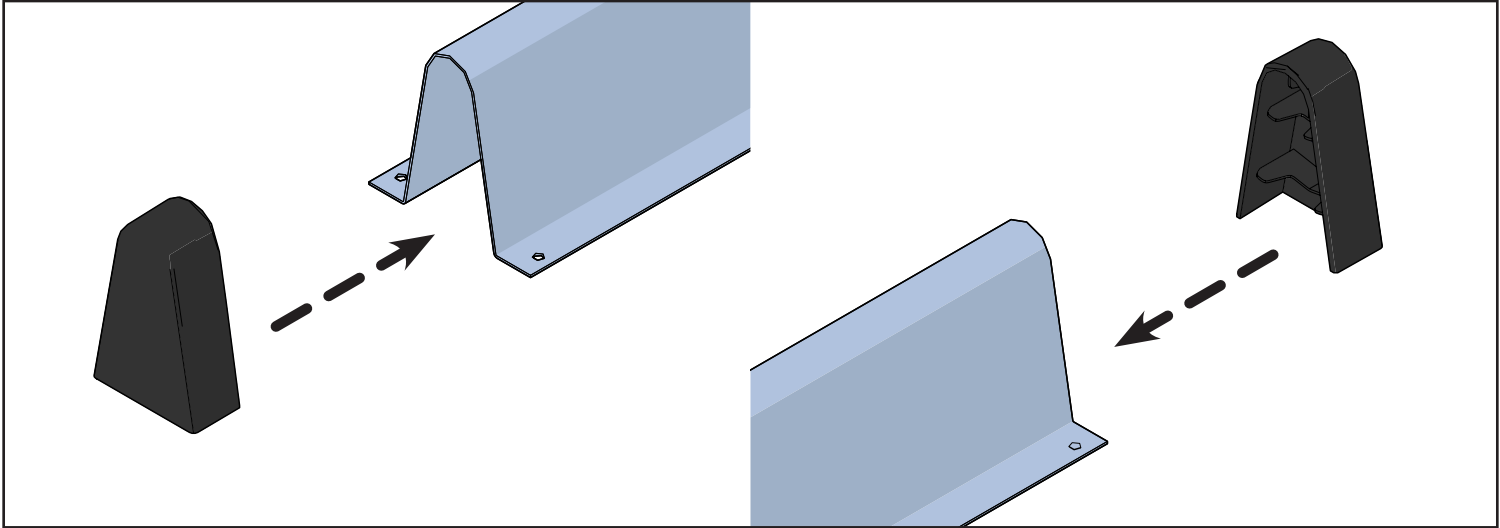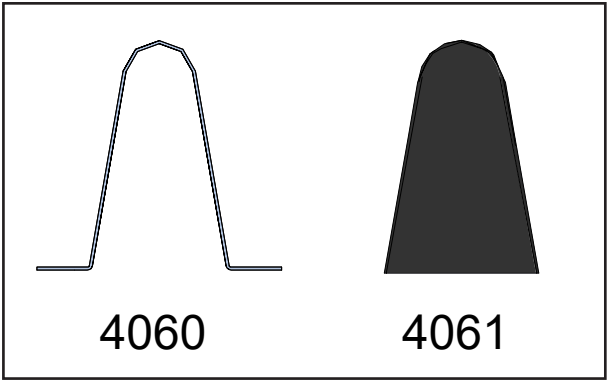

DETAIL A

DETAIL B

